

Globe valve, 2-way, Flange, PN 25

- For closed (high temperature) hot water and steam systems in the noncritical range
- For modulating control of airhandling and heating systems on the water side



Type overview

Туре	DN	kvs	Stroke	PN	n(gl)	Sv min.	
	[]	[m³/h]	[mm]	[]	[]	[]	
H6015XP4-S2	15	0.4	15	25	3	50	
H6015XP63-S2	15	0.63	15	25	3	50	
H6015X1-S2	15	1	15	25	3	50	
H6015X1P6-S2	15	1.6	15	25	3	50	
H6015X2P5-S2	15	2.5	15	25	3	50	
H6015X4-S2	15	4	15	25	3	50	
H6020X4-S2	20	4	15	25	3	100	
H6020X6P3-S2	20	6.3	15	25	3	100	
H6025X6P3-S2	25	6.3	15	25	3	100	
H6025X10-S2	25	10	15	25	3	100	
H6032X10-S2	32	10	15	25	3	100	
H6032X16-S2	32	16	15	25	3	100	
H6040X16-S2	40	16	15	25	3	100	
H6040X25-S2	40	25	15	25	3	100	
H6050X25-S2	50	25	15	25	3	100	
H6050X40-S2	50	40	15	25	3	100	

Technical data

Func

ctional data	Media	Hot water and steam ($\Delta p/P1$ <0.4), water with max. 50% volume of glycol					
	Medium temperature	5150°C					
	Medium temperature note	120°C up to 2500 kPa					
		150 °C up to 2430 kPa					
	Permissible pressure ps	2500 kPa					
	Flow characteristic	equal percentage (VDI/VDE 2173) $n(gl) = 3$, optimised in the opening range					
	Leakage rate	max. 0.05% of the kvs value					
	Pipe connector	Flange according to ISO 7005-2 (PN 25)					
	Closing point	Bottom (▼)					
	Installation position	Upright to horizontal (in relation to the stem)					
	Maintenance	Maintenance-free					
Materials	Housing	GGG 40.3					
	Closing element	Stainless steel					
	Stem	Stainless steel					
	Stem seal	PFTE V-ring					
	Seat	Stainless steel					

Safety notes



- The valve has been designed for use in stationary heating, ventilation and airconditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The valve does not contain any parts that can be replaced or repaired by the user.




Safety notes	
	 The valve may not be disposed of as household refuse. All locally valid regulations and requirements must be observed. When determining the flow rate characteristic of controlled devices, the recognised directives must be observed.
Product features	
Mode of operation	The globe valve is adjusted by a globe valve actuator. The actuators are connected by a commercially available modulating or 3-point control system and move the valve cone, which acts as a throttling device, into the opening position dictated by the positioning signal.
Flow characteristic	An equal percentage flow characteristic is produced by the profile of the valve cone.
Installation notes	
Recommended installation positions	The globe valve may be mounted upright to horizontal. It is not permissible to mount the globe valves with the spindle pointing downwards.
Water quality requirements	The water quality requirements specified in VDI 2035 must be adhered to. Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of suitable strainer is recommended.
Maintenance	Globe valves and globe valve actuators are maintenance-free. In the event of any service work on the final controlling device, it is essential to isolate the globe valve actuator from the power supply (by disconnecting the electrical cables if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate shut-off valves closed (allow everything to cool down first if necessary and reduce the system pressure to ambient pressure level). The system must not be returned to service until the globe valve and the globe valve actuator have been mounted properly in accordance with the instructions and the pipes have been refilled in the proper manner.
Flow direction	The direction of flow, specified by an arrow on the housing, is to be complied with, since otherwise the valve could become damaged.


H6..X..-S2



Dimensions / Weight

Dimensional drawings

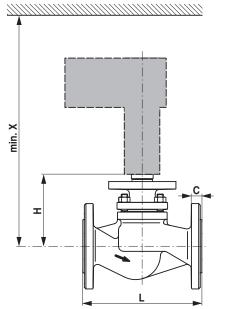

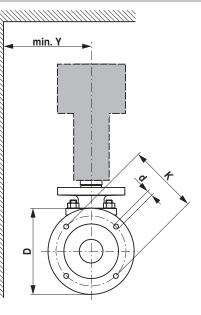

 $X\!/Y\!\!:$ Minimum distance with respect to the valve centre. The actuator dimensions can be found on the respective actuator data sheet.

Туре	DN []	L [mm]	H [mm]	D [mm]	d [mm]	К [mm]	X [mm]	Y [mm]	Weight [kg]
H6015XP4-S2	15	130	118	95	4 x 14	65	370	100	3.9
H6015XP63-S2	15	130	118	95	4 x 14	65	370	100	3.9
H6015X1-S2	15	130	118	95	4 x 14	65	370	100	3.9
H6015X1P6-S2	15	130	118	95	4 x 14	65	370	100	3.9
H6015X2P5-S2	15	130	118	95	4 x 14	65	370	100	3.9
H6015X4-S2	15	130	118	95	4 x 14	65	370	100	3.9
H6020X4-S2	20	150	118	105	4 x 14	75	370	100	4.9
H6020X6P3-S2	20	150	118	105	4 x 14	75	370	100	4.9
H6025X6P3-S2	25	160	126	115	4 x 14	85	380	100	6.0
H6025X10-S2	25	160	126	115	4 x 14	85	380	100	6.0
H6032X10-S2	32	180	126	140	4 x 18	100	380	100	7.5
H6032X16-S2	32	180	126	140	4 x 18	100	380	100	7.5
H6040X16-S2	40	200	133	150	4 x 18	110	390	100	9.3
H6040X25-S2	40	200	133	150	4 x 18	110	390	100	9.3
H6050X25-S2	50	230	139	165	4 x 18	125	390	100	11.8
H6050X40-S2	50	230	139	165	4 x 18	125	390	100	11.8

Further documentation

Overview Valve-actuator combinations

Data sheets for globe valve actuators

· Installation instructions for valves and/or globe valve actuators

· Notes for project planning 2-way and 3-way globe valves