

BELIMO

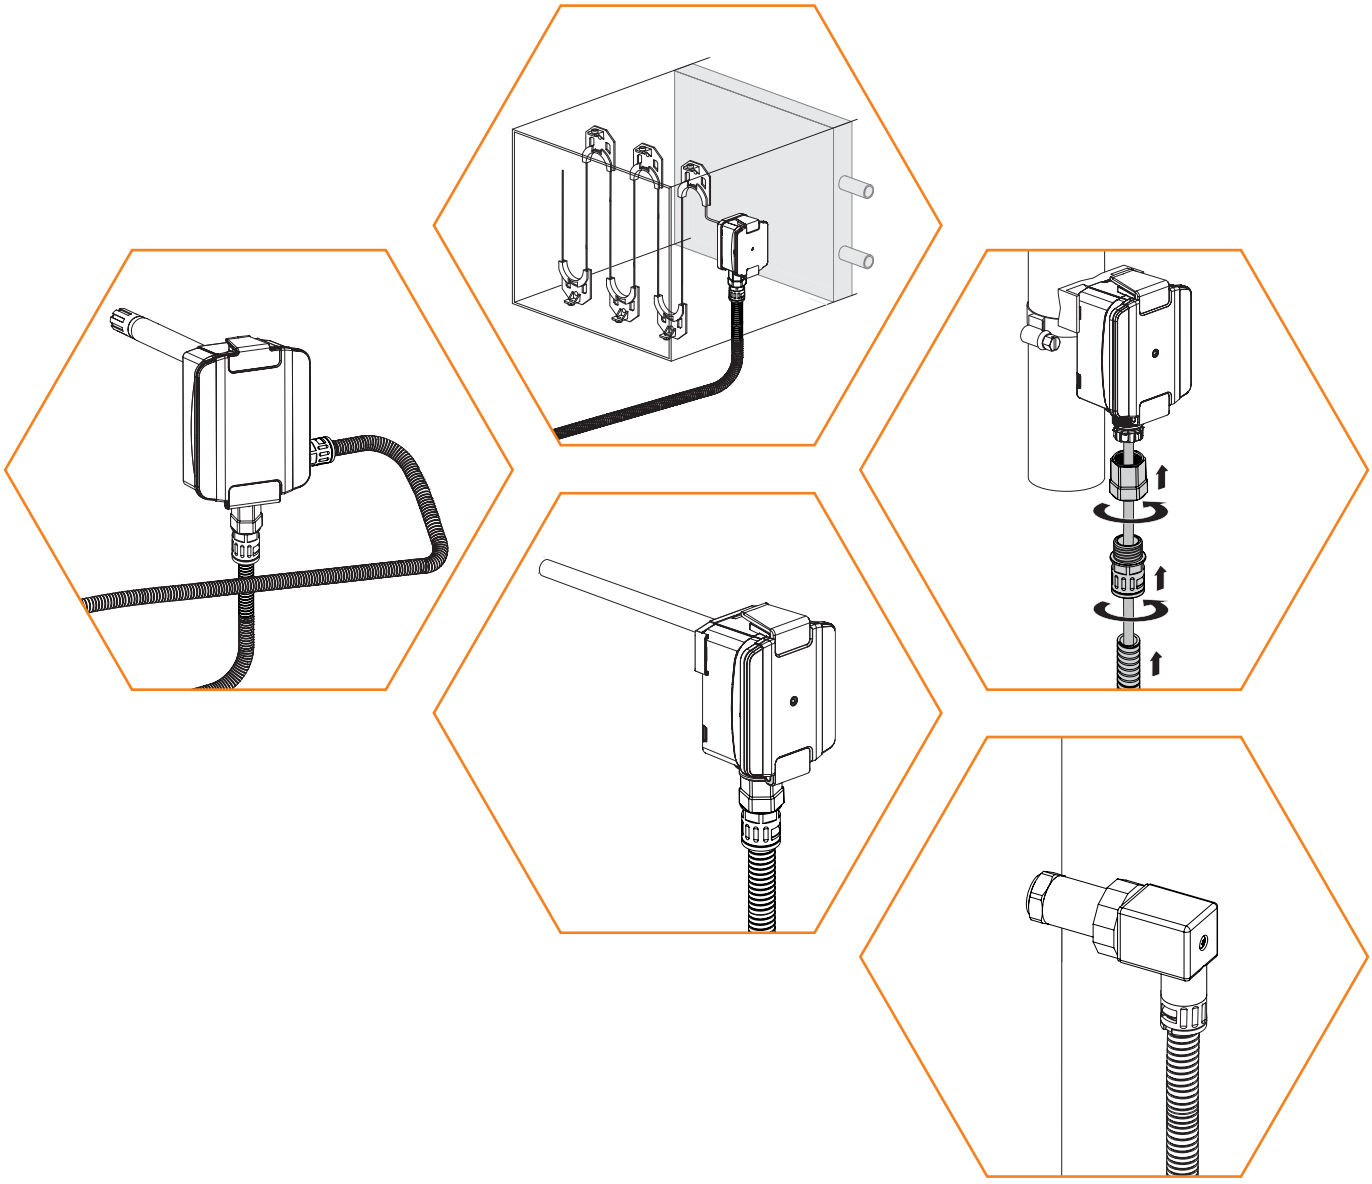

11.2020

72056-00001.A

i

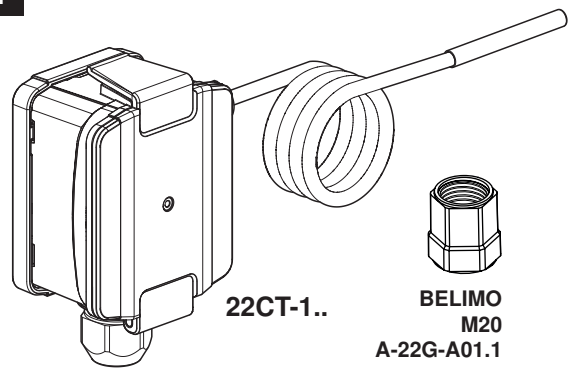

22CT-1..


BELIMO
M20
A-22G-A01.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

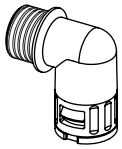


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

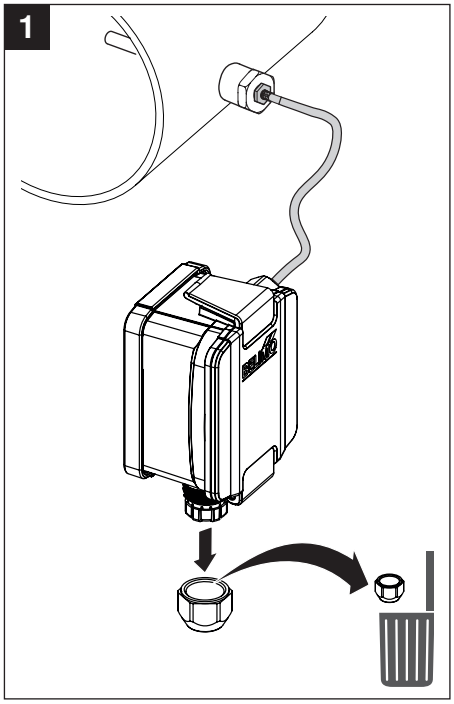


2

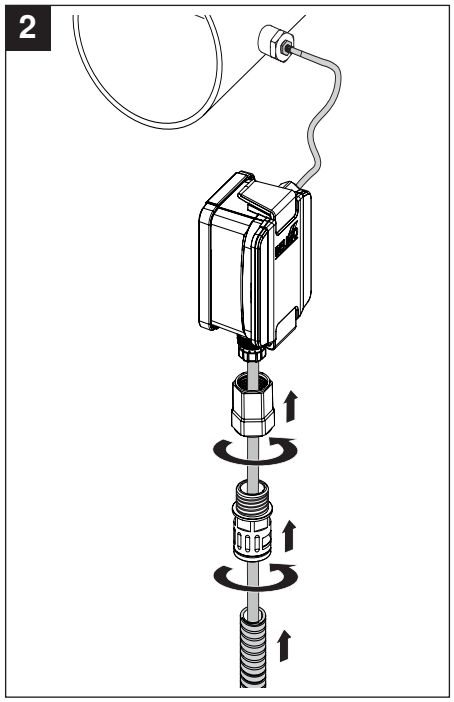

3

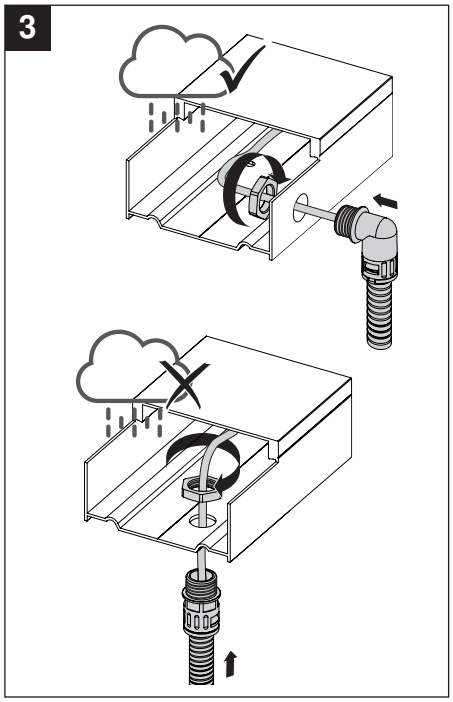


4

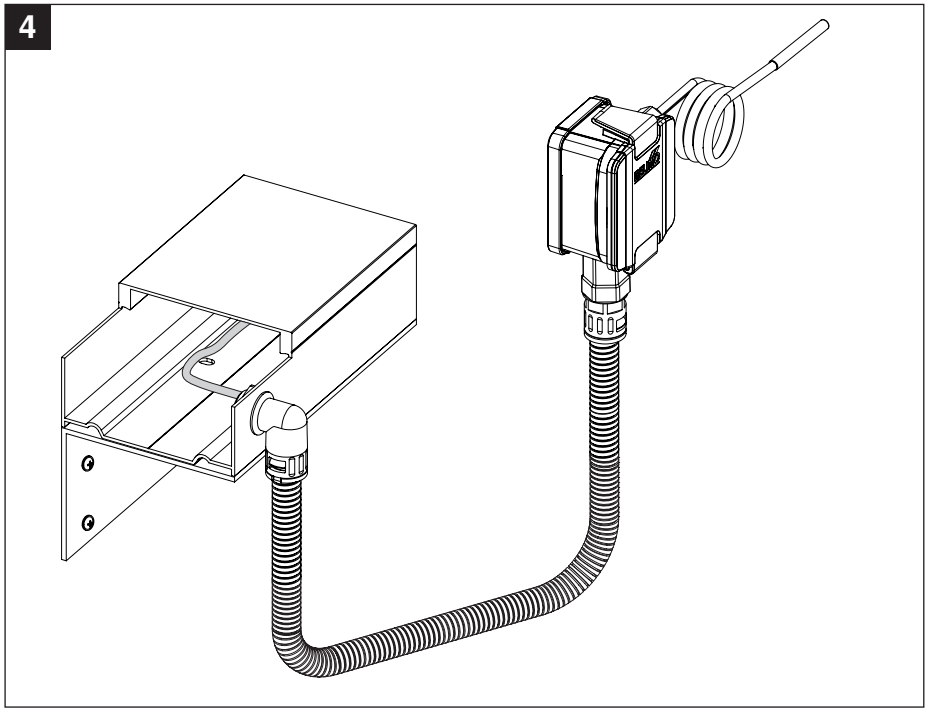

www.belimo.com/safety

72057-00001.A

i

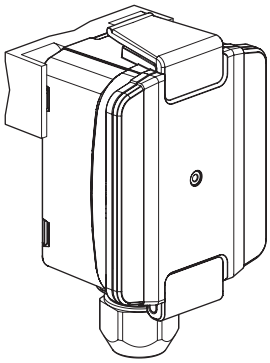

01HT-1..
22HT-1..




BELIMO
M20
A-22G-A01.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

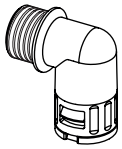


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

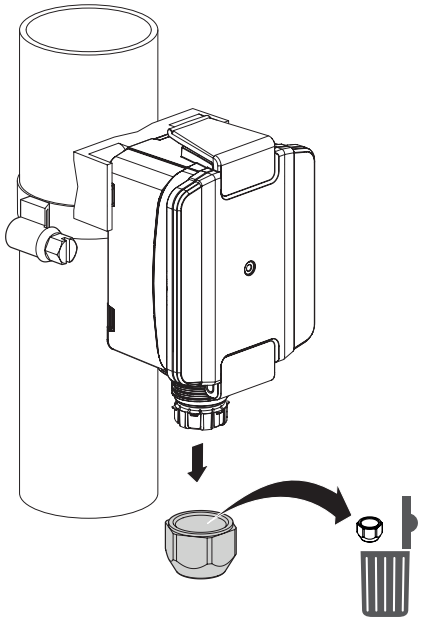


2

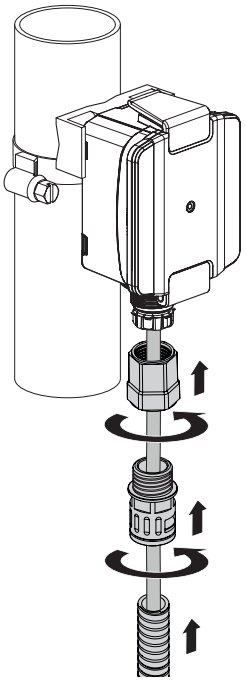

3

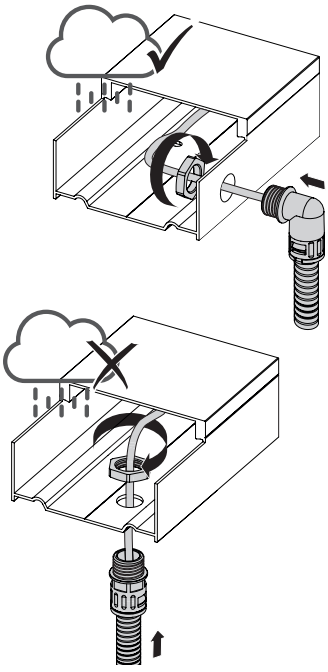


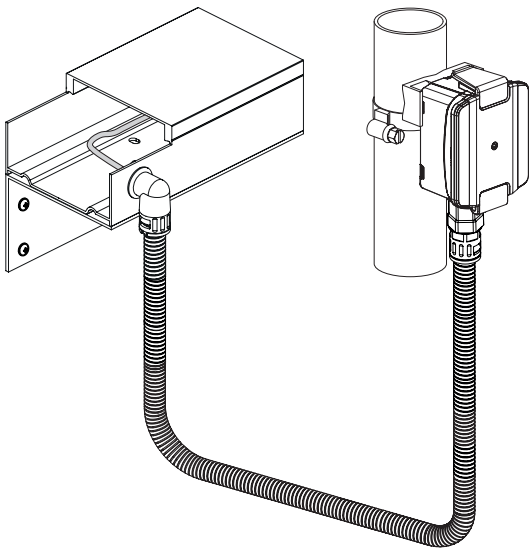

www.belimo.com/safety

72058-00001.A

i

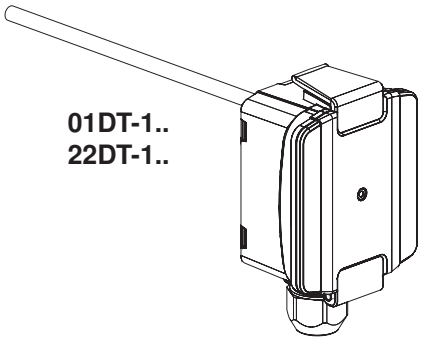

01DT-1..
22DT-1..




BELIMO
M20
A-22G-A01.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

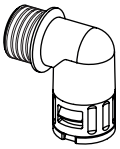


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

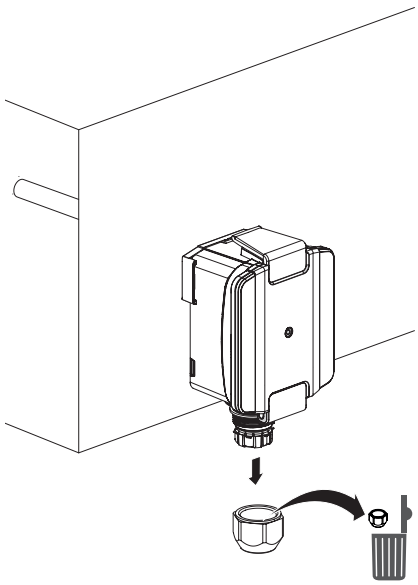


2

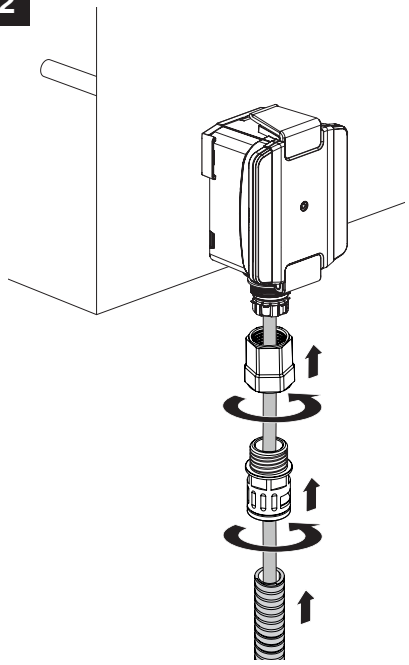

3

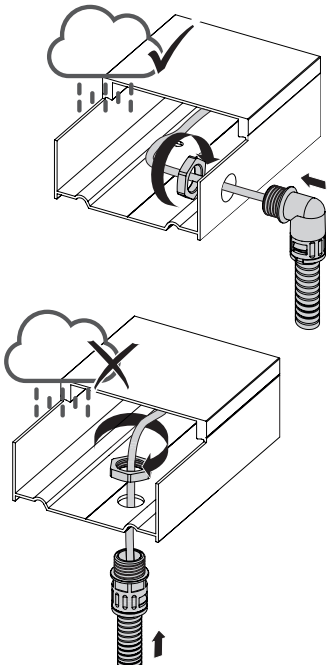


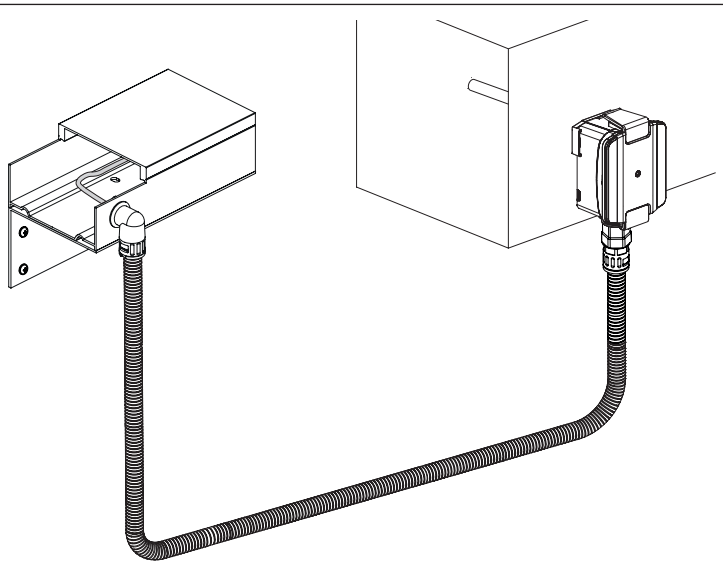

www.belimo.com/safety

72059-00001.A

i

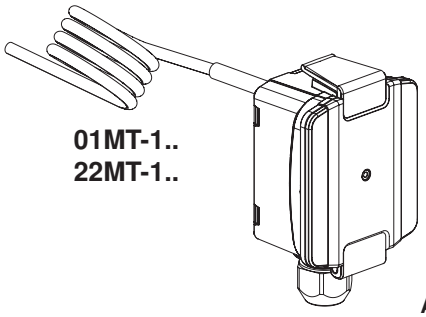

01MT-1..
22MT-1..




BELIMO
M20
A-22G-A01.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

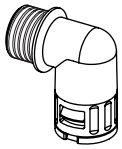


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

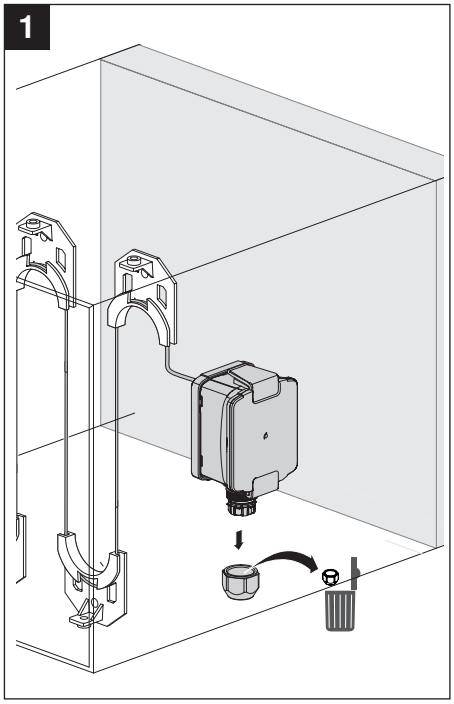


2

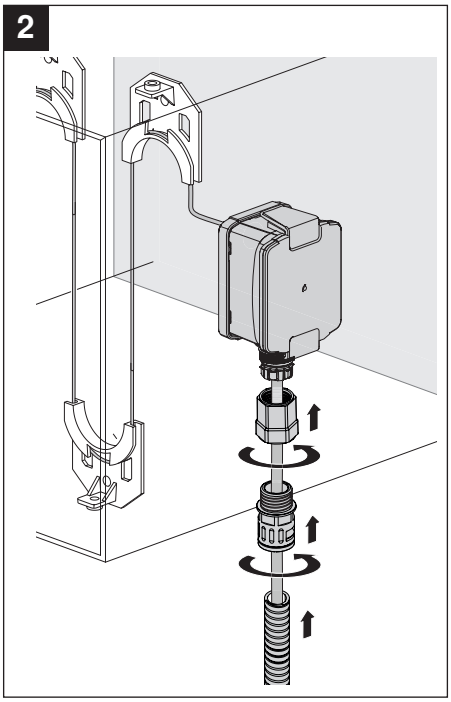

3

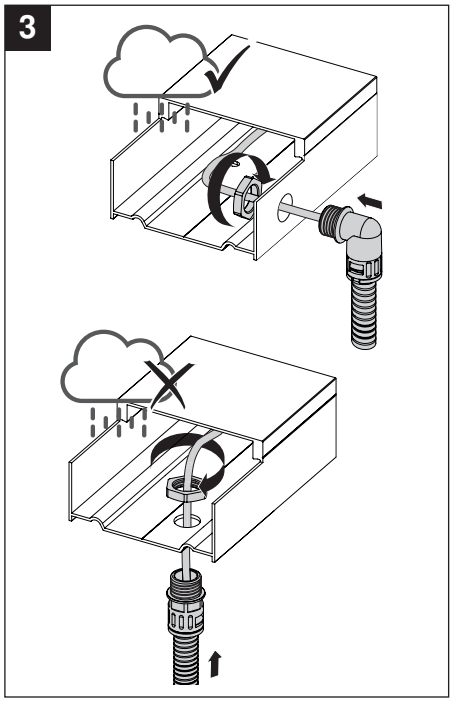


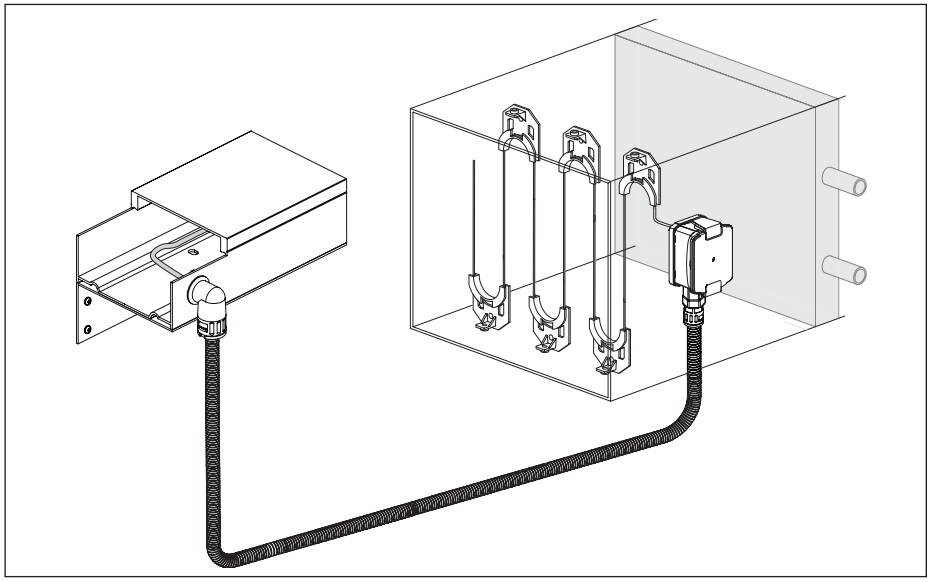

www.belimo.com/safety

72060-00001.A


i

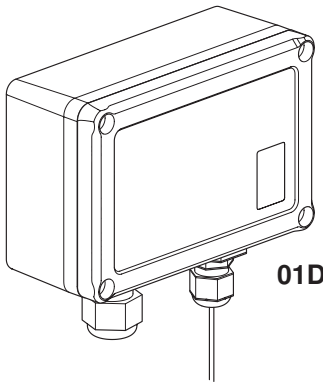


01DTS-1..




AGRO/FLEXA
M16
8217.40
M20
8220.40



AGRO/FLEXA
❶ M16
5020.055.216
❷ M20
5020.055.218




AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

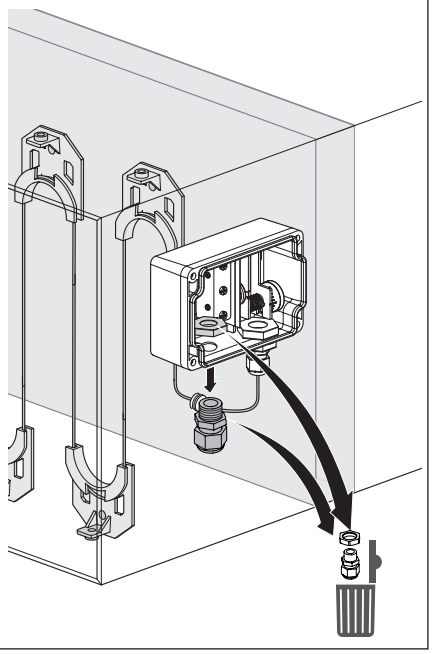


2

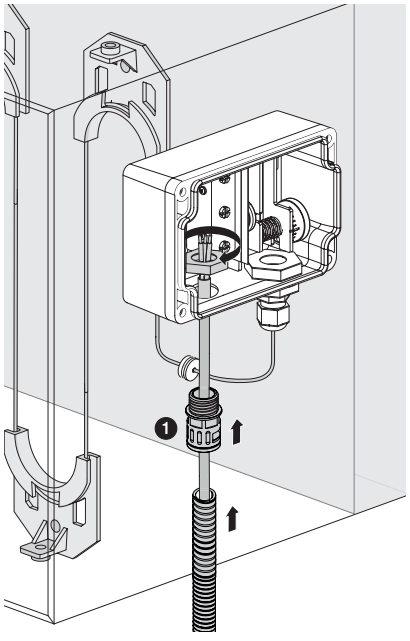

3

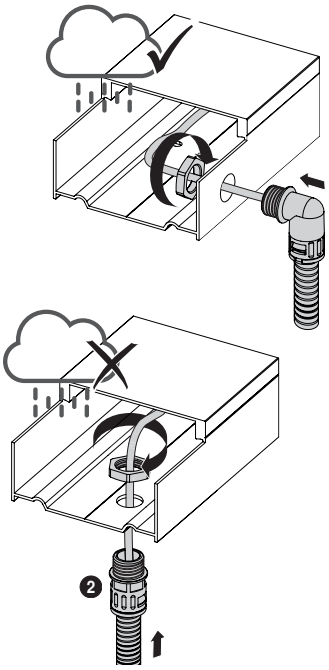


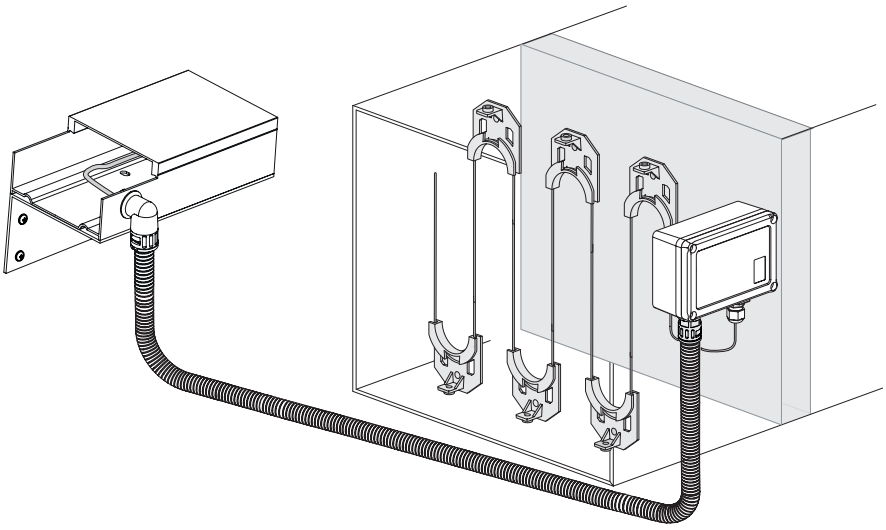

www.belimo.com/safety

72061-00001.A

i

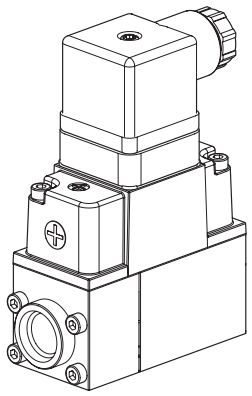


22WDP-1..




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
❶ M16
5020.055.216
❷ M20
5020.055.218

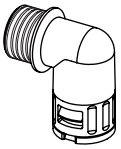


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

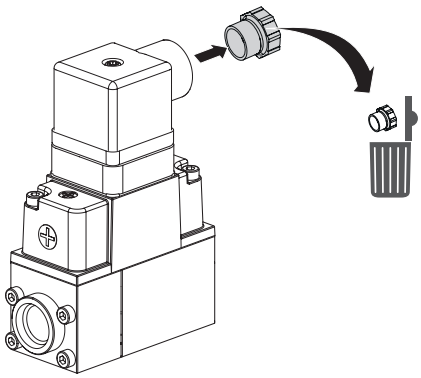


2

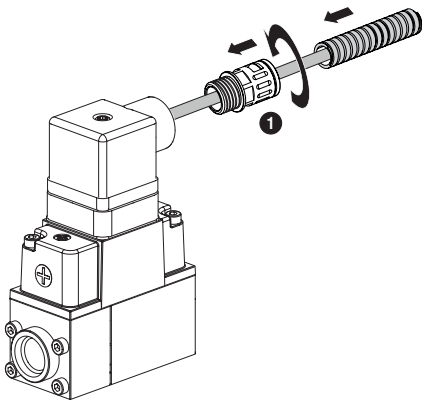

3

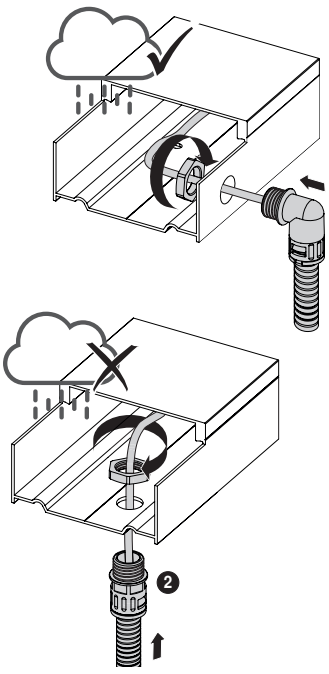


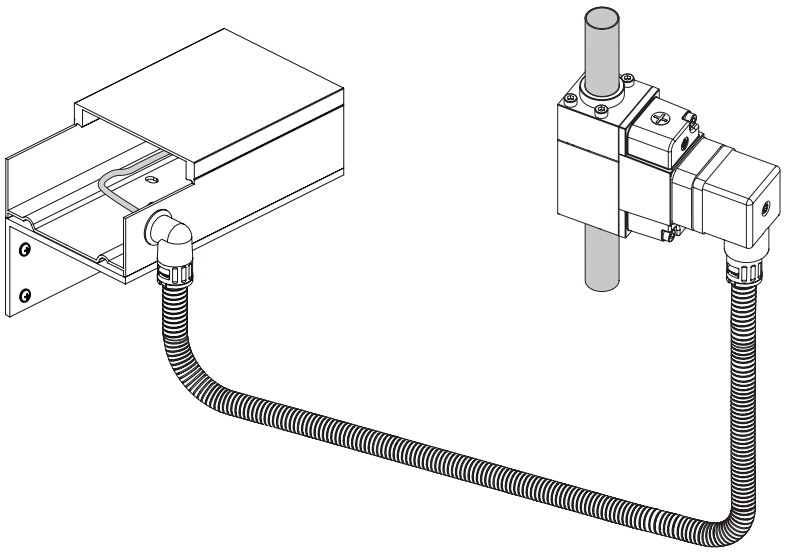


www.belimo.com/safety

72062-00001.A

i

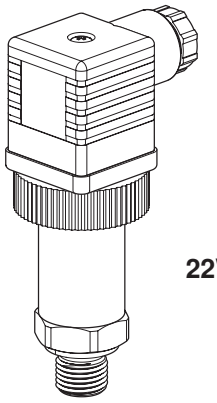

22WP-1..

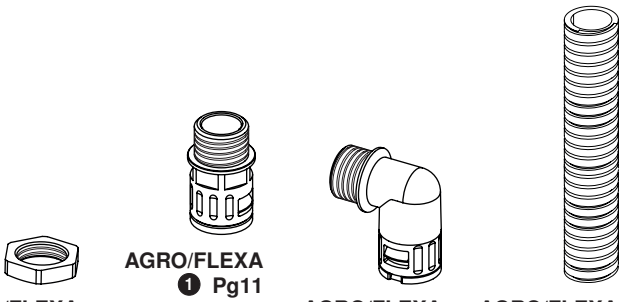


AGRO/FLEXA
M20
8220.40

AGRO/FLEXA
❶ Pg11
5020.049.211
❷ M20
5020.049.211


AGRO/FLEXA
M20
5020.051.220

AGRO/FLEXA
PA6
0233.202.012


1

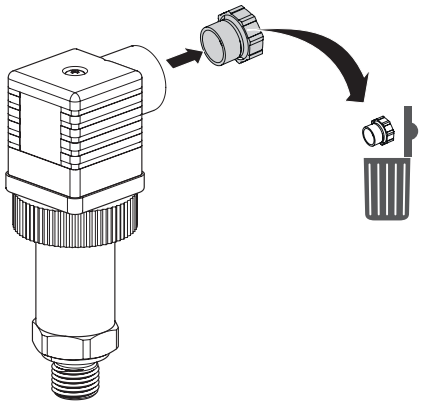


2

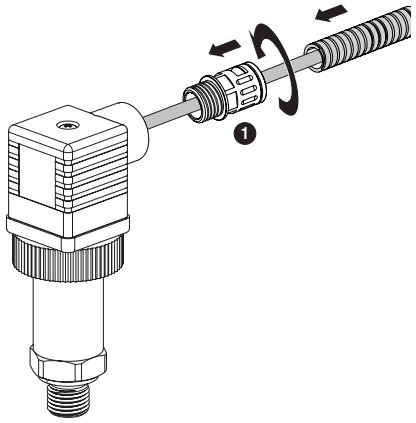

3

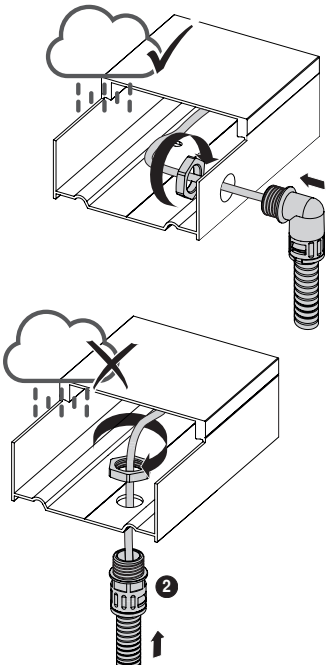


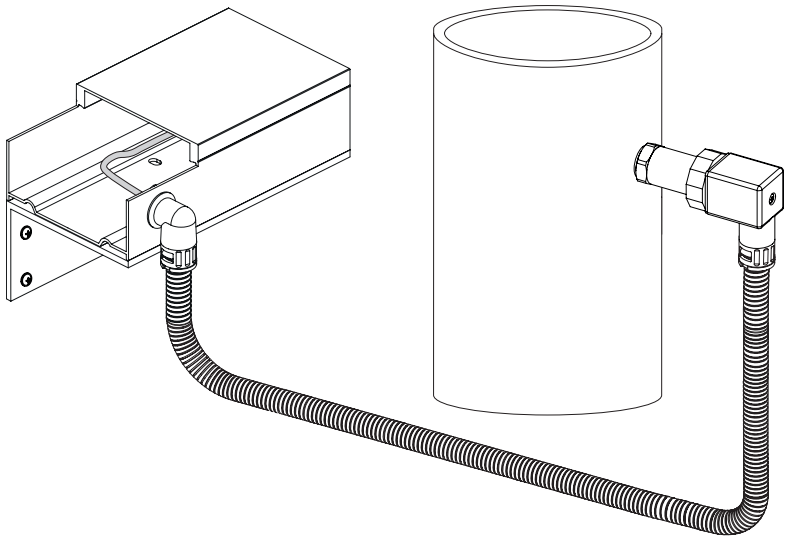


www.belimo.com/safety

72063-00001.A

i

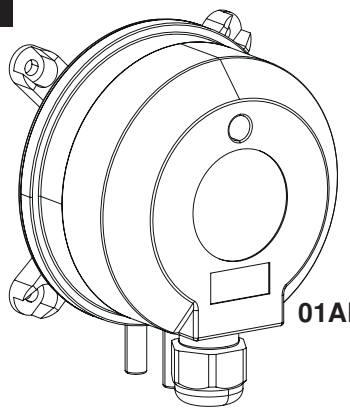

01APS-1..

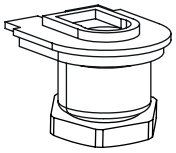


BELIMO
M20
A-22AP-A11.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

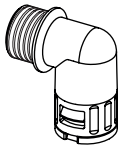


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

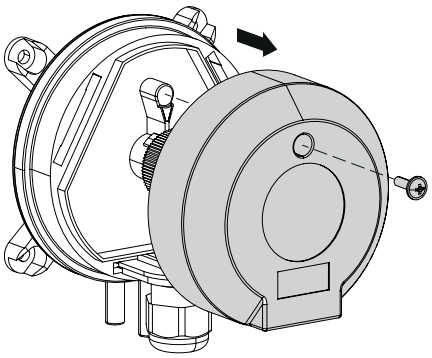


2

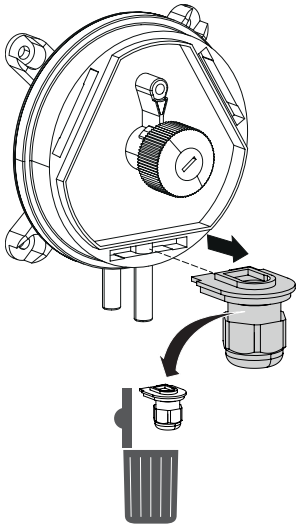


3

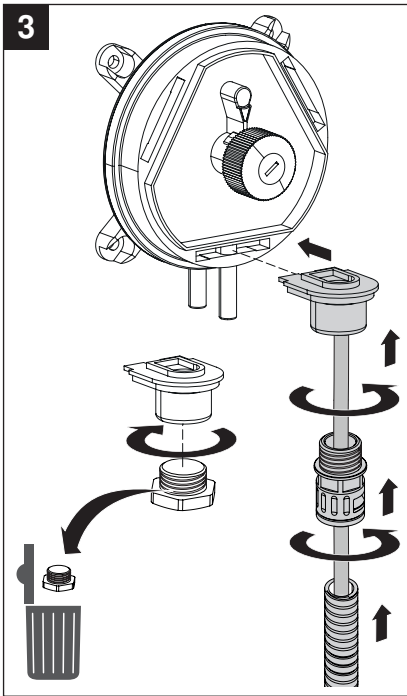

4

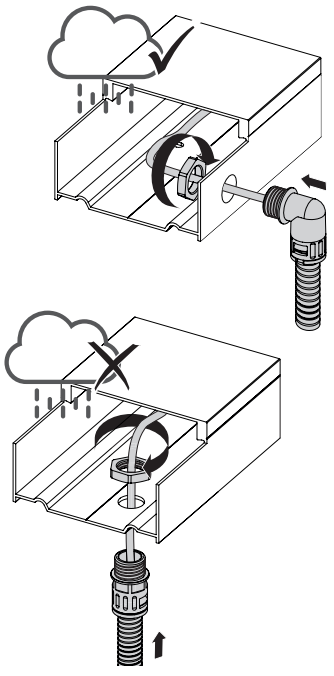


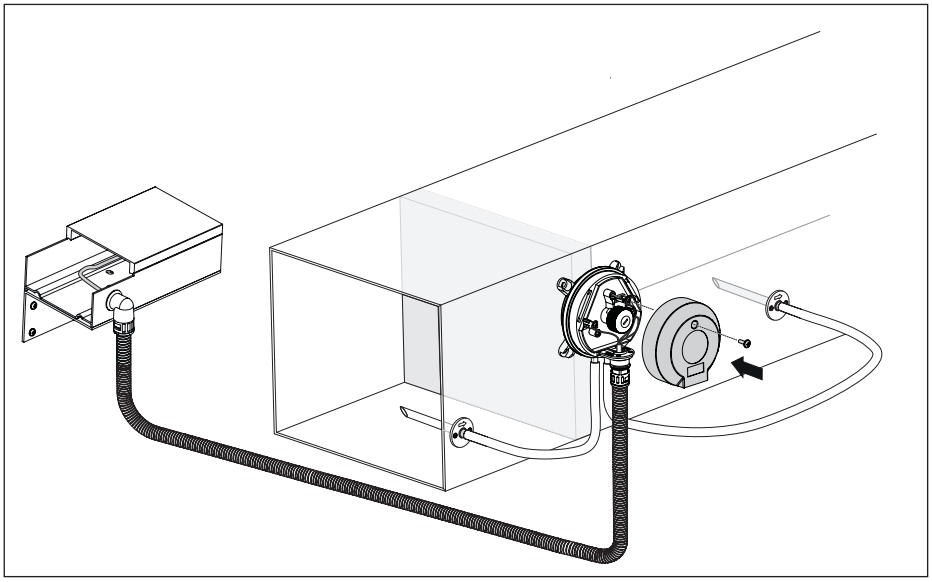

www.belimo.com/safety

72064-00001.B

i

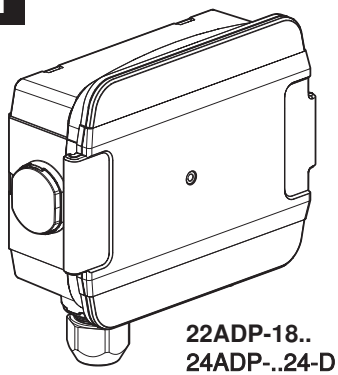

22ADP-18..
24ADP-..24-D
24ADP-..24-F




BELIMO
M20
A-22G-A01.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

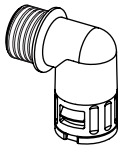


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

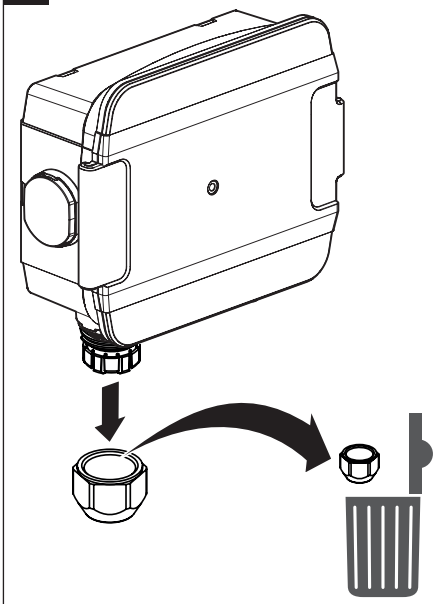


2

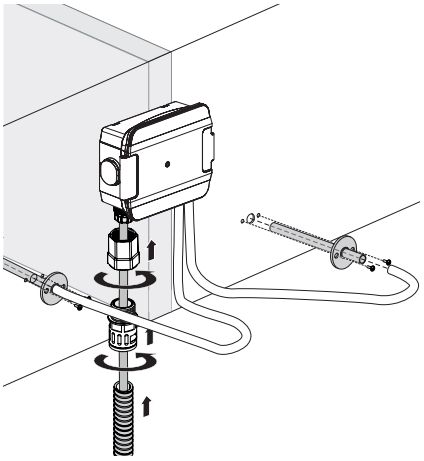

3

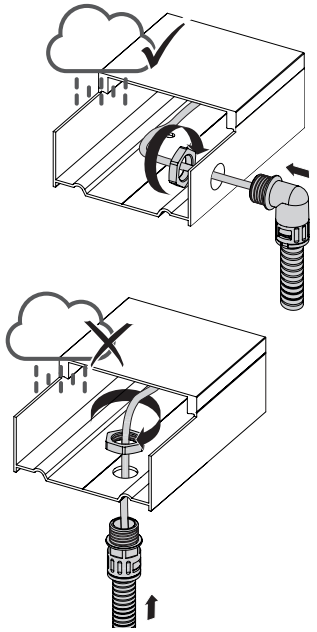


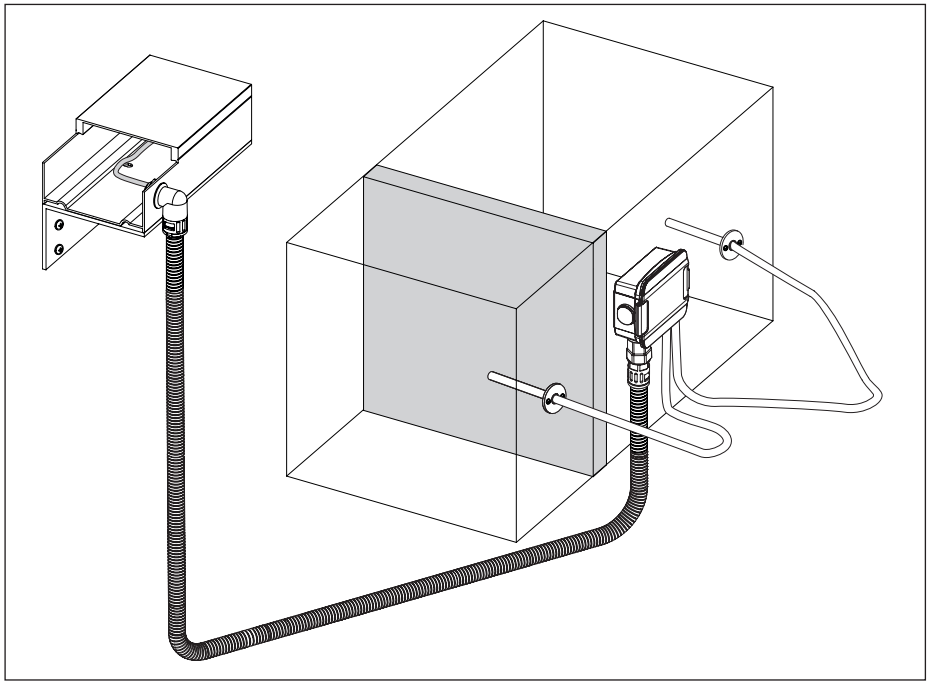


www.belimo.com/safety

72065-00001.A

i

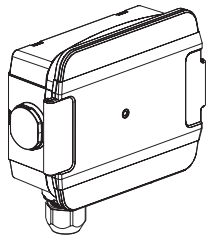

22ADP-15..
22ADP-16..

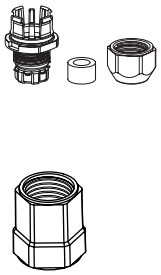


BELIMO
M20
❶ A-22G-A01.1
❷ A-22G-A02.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

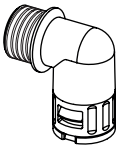


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

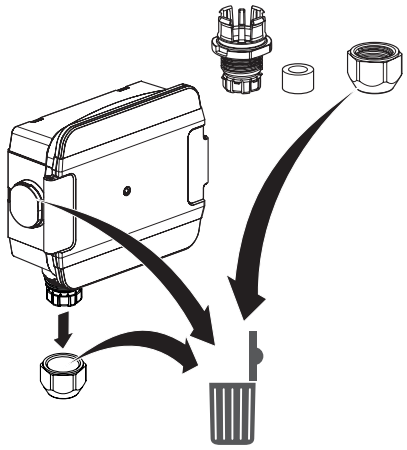


2

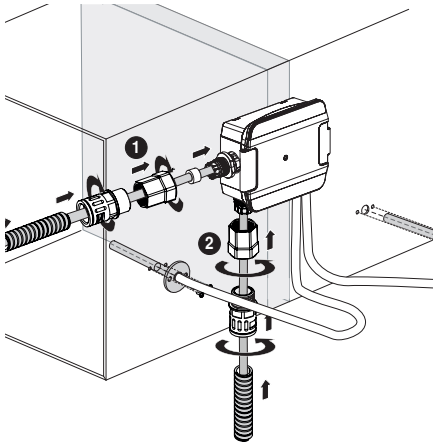

3

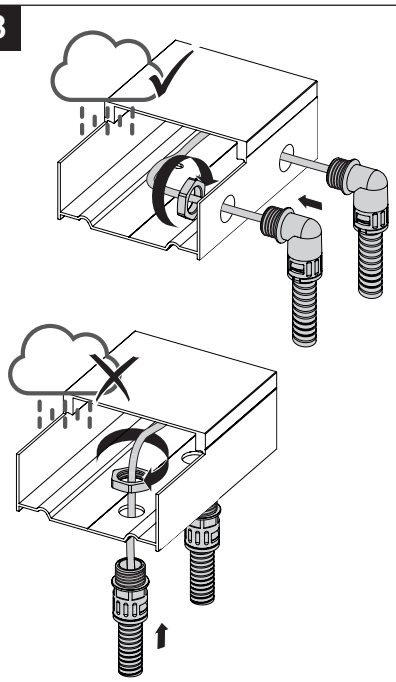


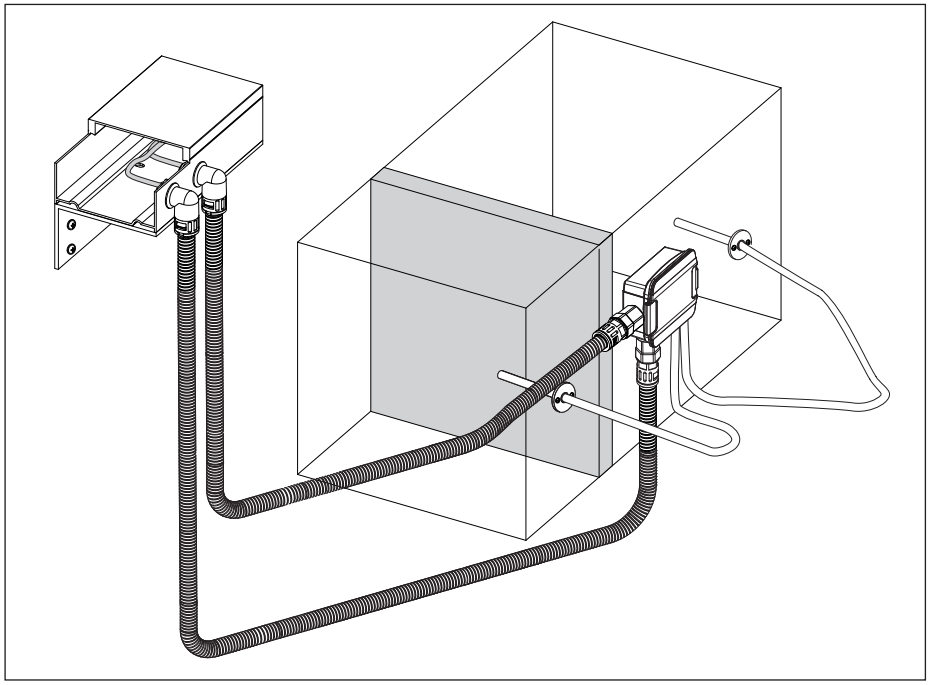

www.belimo.com/safety

72066-00001.A

i

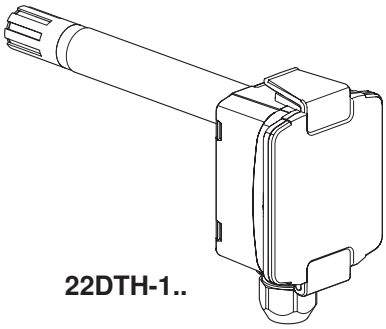

22DTH-1..




BELIMO
M20
A-22G-A01.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

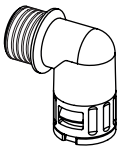


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

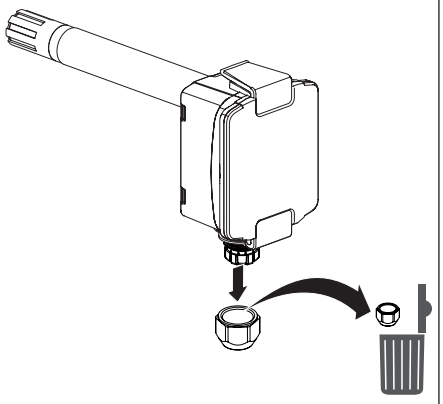


2

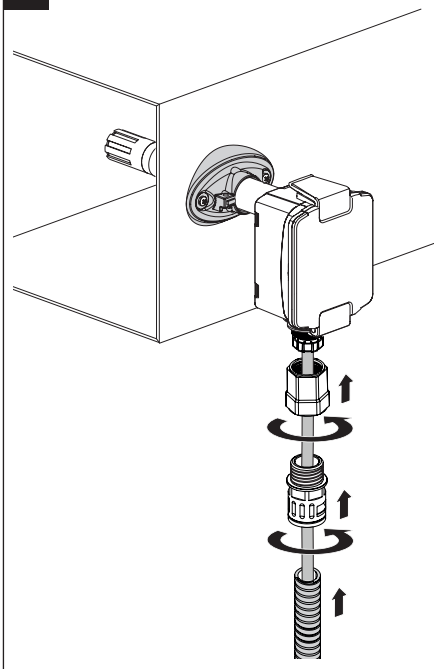

3

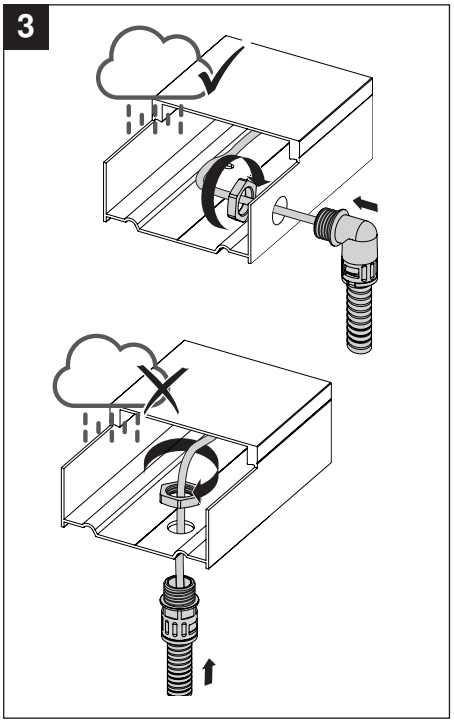


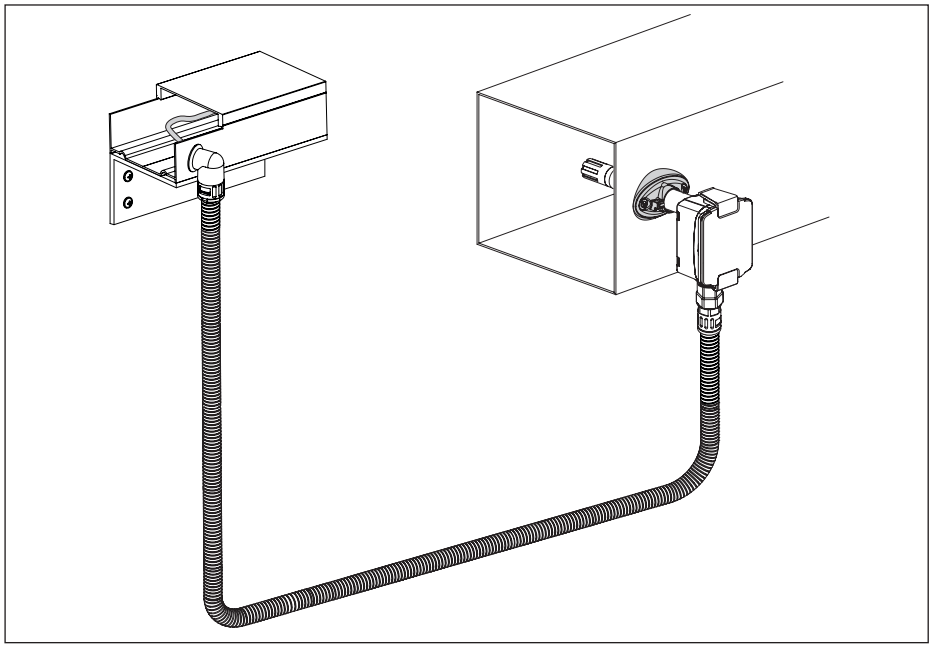


www.belimo.com/safety

72067-00001.A

i

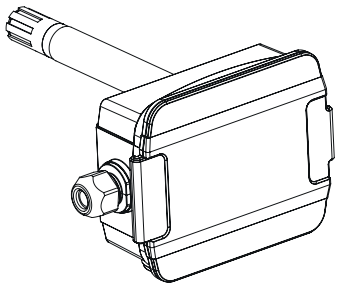

22DTH-1..






BELIMO
M20
❶ A-22G-A01.1
❷ A-22G-A01.2




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

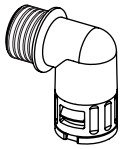


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

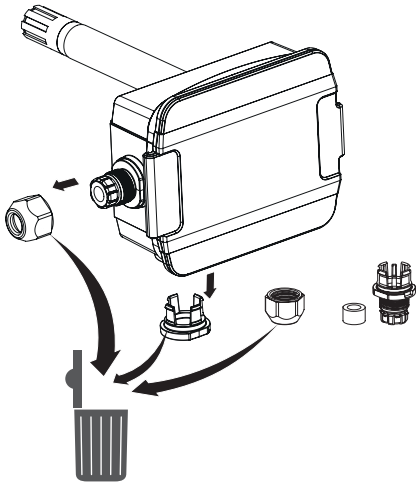


2

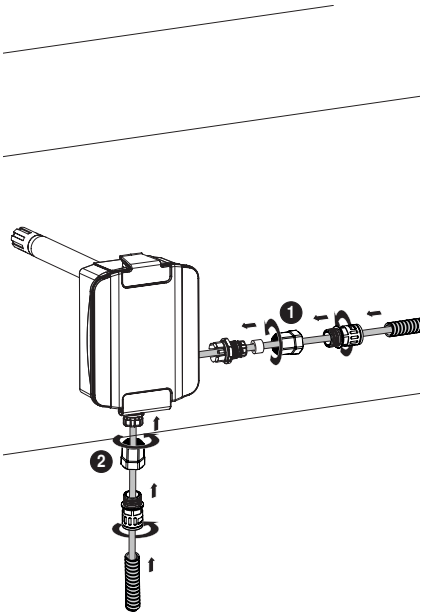

3

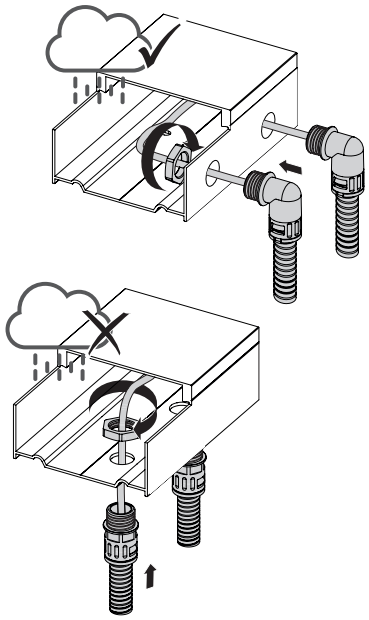


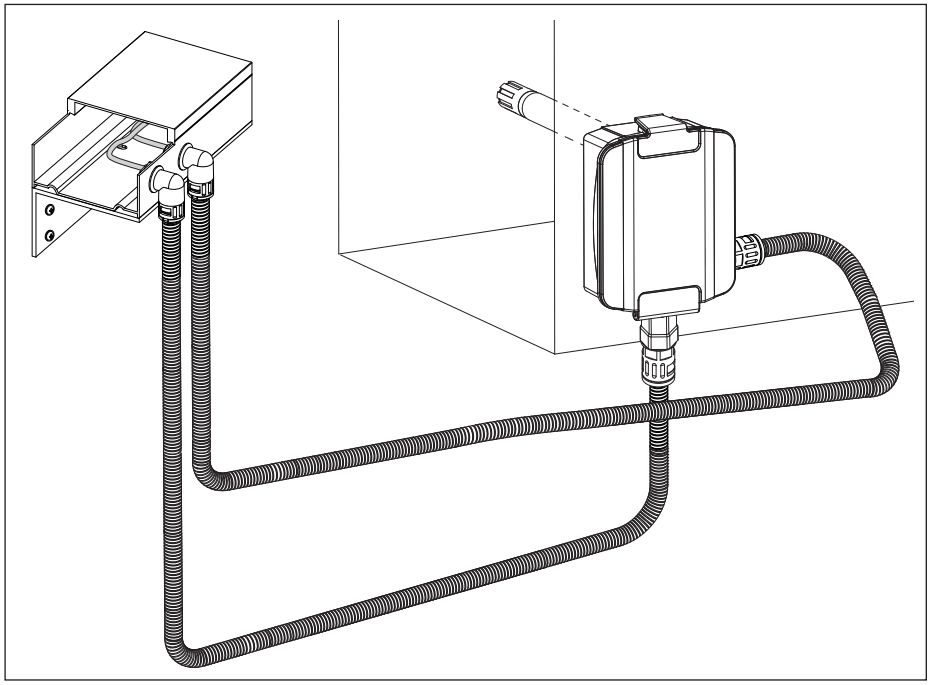

www.belimo.com/safety

72068-00001.A

i

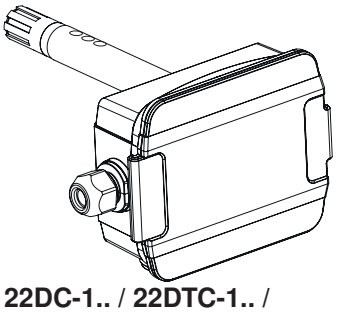

22DC-1.. / 22DTC-1.. / 22DTM-1.. / 22DCV-1.. / 22DCM-1.. / 22DCK-1..




BELIMO M20 A-22G-A01.1




AGRO/FLEXA M20 8220.40



AGRO/FLEXA M20 5020.055.218

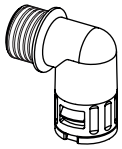


AGRO/FLEXA M20 5020.051.220




AGRO/FLEXA PA6 0233.202.012


1

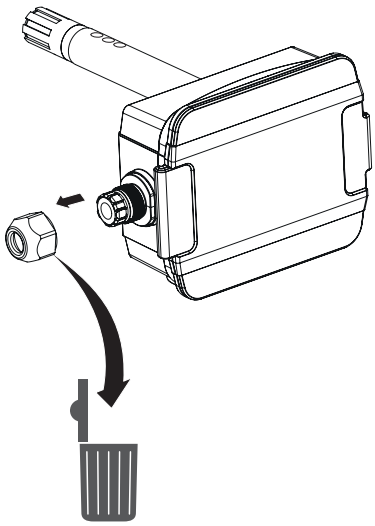


2

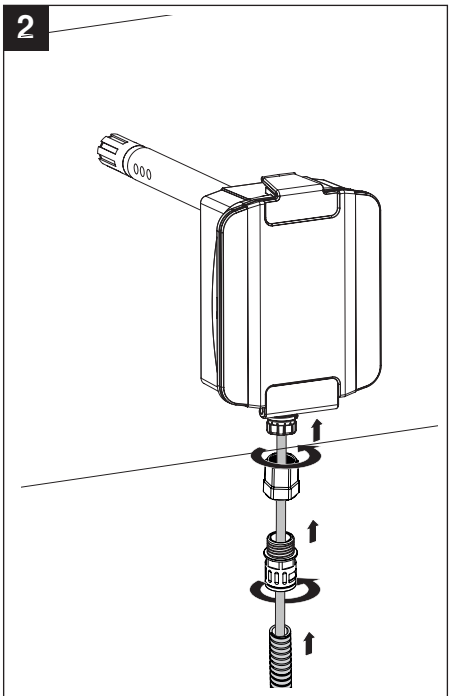

3

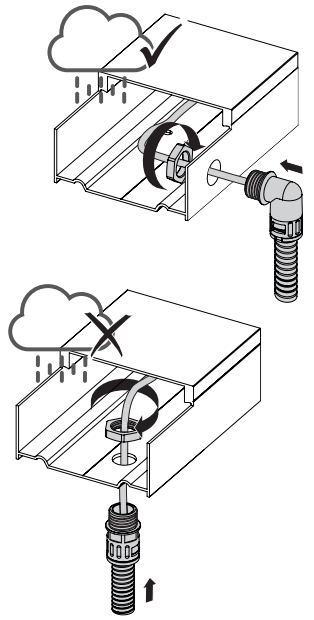


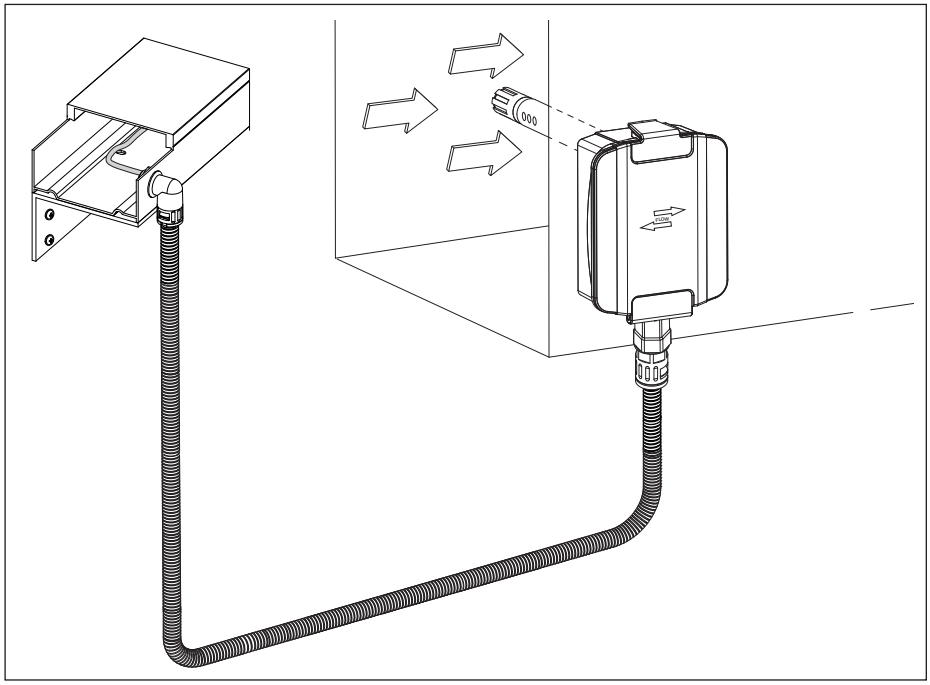


www.belimo.com/safety

72069-00001.A

i

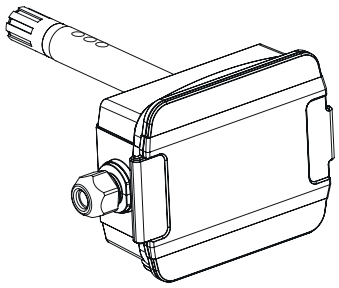

22DTM-15..
22DTM-16..






BELIMO
M20
❶ A-22G-A01.1
❷ A-22G-A02.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

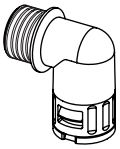


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

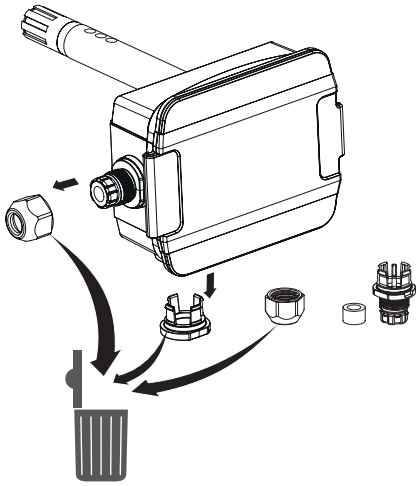


2

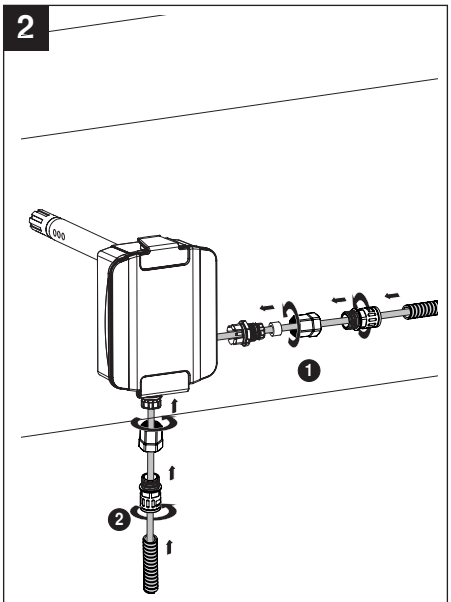

3

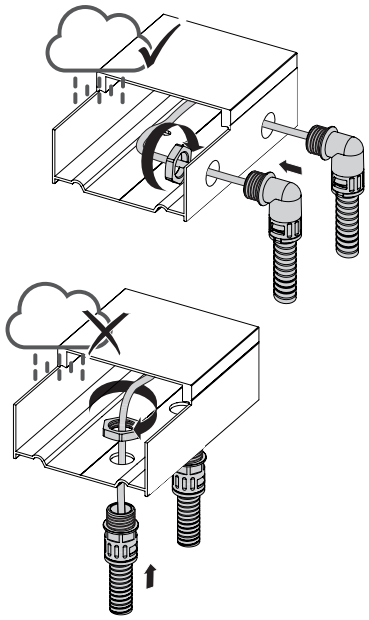


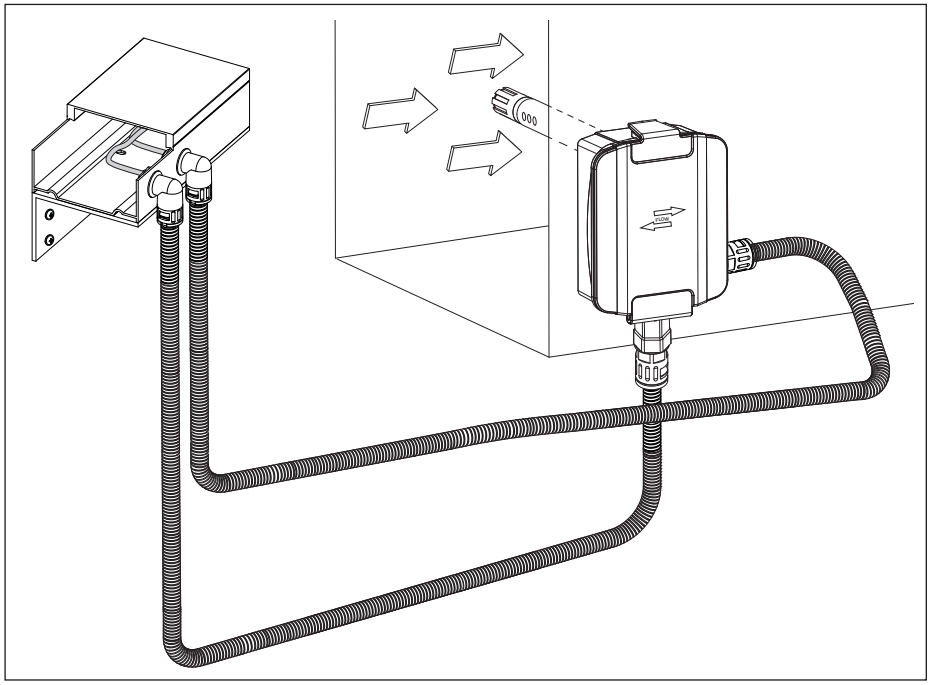

www.belimo.com/safety

72070-00001.A

i

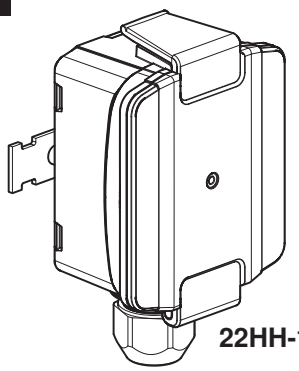

22HH-1..




BELIMO
M20
A-22G-A01.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

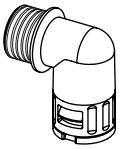


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

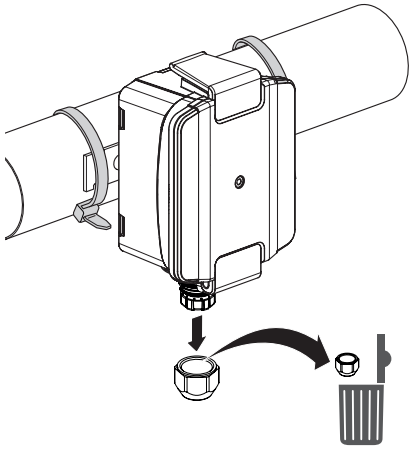


2

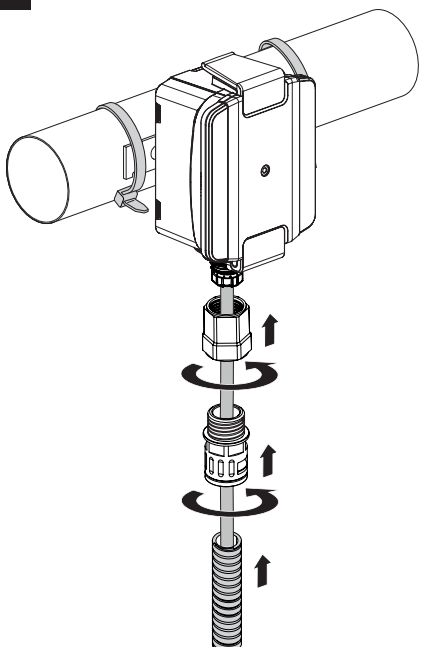

3

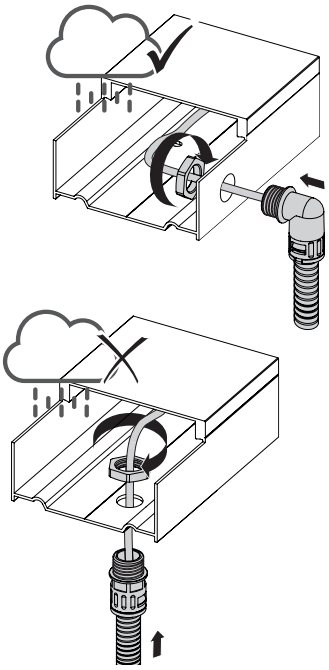


4

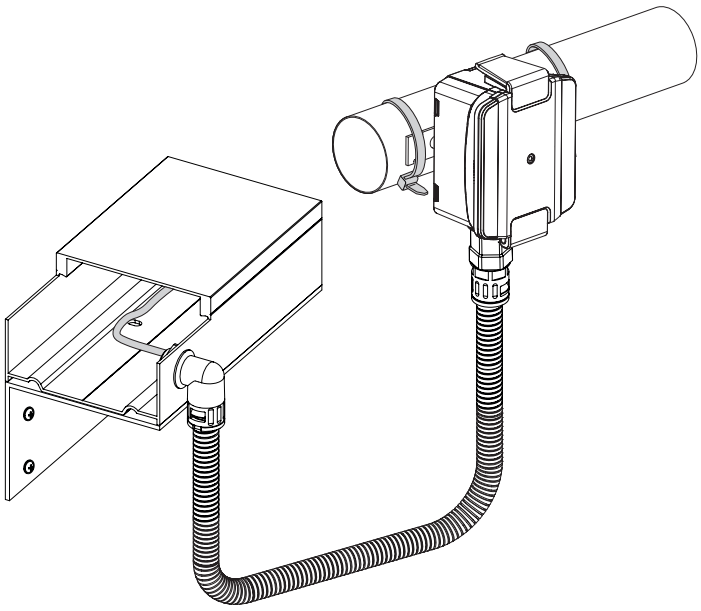

www.belimo.com/safety

72071-00001.A

i

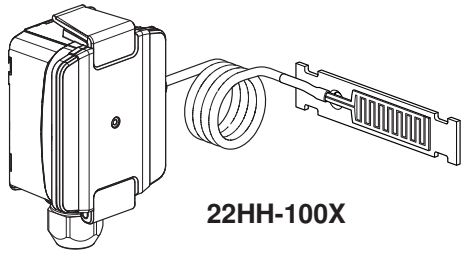

22HH-100X




BELIMO
M20
A-22G-A01.1




AGRO/FLEXA
M20
8220.40



AGRO/FLEXA
M20
5020.055.218

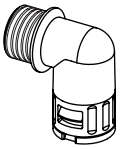


AGRO/FLEXA
M20
5020.051.220




AGRO/FLEXA
PA6
0233.202.012


1

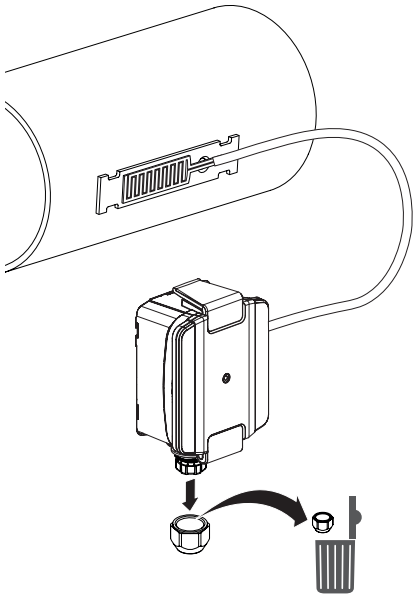


2

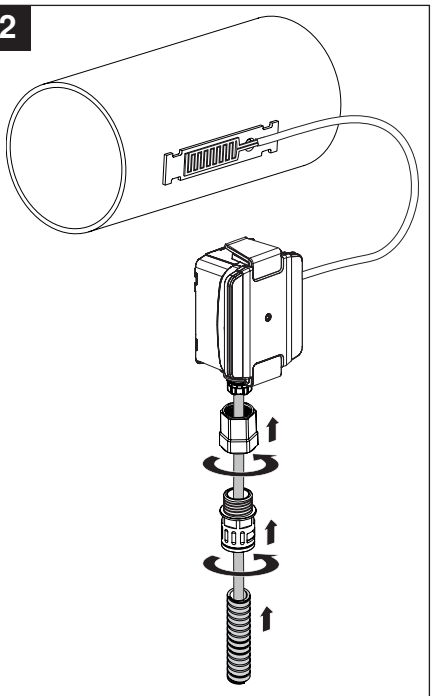

3

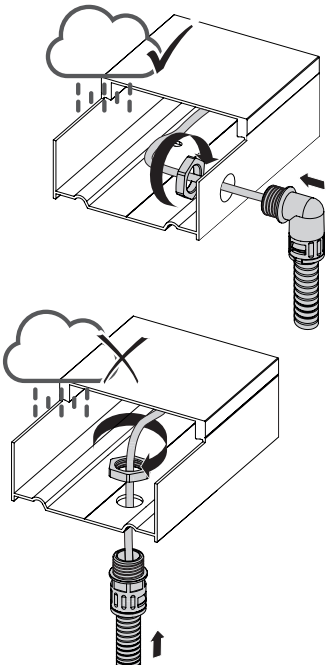

4

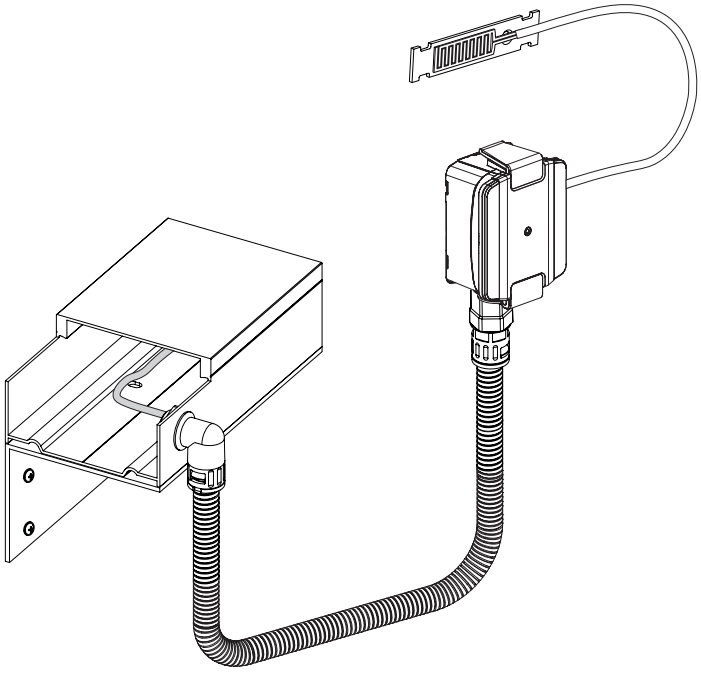

www.belimo.com/safety

BELIMO

In your vicinity – Everywhere



5-year warranty

On site around the globe

Complete product range

Tested quality

Short delivery times

Comprehensive support

BELIMO Automation AG
Brunnenbachstrasse 1
CH-8340 Hinwil, Switzerland

Telephone: +41 43 843 61 11
Telefax: +41 43 843 62 68
info@belimo.ch
www.belimo.eu

Worldwide: www.belimo.com