

Rotary actuator for ball valves

- Nominal torque 20 Nm
- Nominal voltage AC/DC 24 V
- · Control Open-close, 3-point



Technical data				
Electrical data	Nominal voltage	AC/DC 24 V		
	Nominal voltage frequency	50/60 Hz		
	Nominal voltage range	AC 19.228.8 V / DC 19.228.8 V		
	Power consumption in operation	2.5 W		
	Power consumption in rest position	0.2 W		
	Power consumption for wire sizing	5.5 VA		
	Connection supply / control	Cable 1 m, 3 x 0.75 mm ²		
	Parallel operation	Yes (note the performance data)		
Functional data	Torque motor	Min. 20 Nm		
	Manual override	Gear disengagement with push-button, can be locked		
	Running time motor	90 s / 90°		
	Sound power level motor max.	45 dB(A)		
	Position indication	Mechanically, pluggable		
Safety	Protection class IEC/EN	III Safety extra-low voltage		
	Protection class UL	UL Class 2 Supply		
	Degree of protection IEC/EN	IP54		
	Degree of protection NEMA/UL	NEMA 2, UL Enclosure Type 2		
	EMC	CE according to 2004/108/EC		
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14		
	Certification UL	cULus according to UL 60730-1A, UL 60730-2- 14 and CAN/CSA E60730-1:02		
	Mode of operation	Type 1		
	Rated impulse voltage supply / control	0.8 kV		
	Control pollution degree	3		
	Ambient temperature	-3050°C		
	Non-operating temperature	-4080°C		
	Ambient humidity	95% r.h., non-condensing		
	Maintenance	Maintenance-free		

Safety notes



Weight

Weight approx.

 This device has been designed for use in stationary heating, ventilation and air conditioning systems and is not allowed to be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

1 kg

- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The switch for changing the direction of rotation may only be operated by authorised specialists. The direction of rotation must not in particular be reversed in a frost protection circuit.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The cables must not be removed from the device.
- The device contains electrical and electronic components and is not allowed to be disposed of as household refuse. All locally valid regulations and requirements must be observed.



Product features

Direct mounting Straightforward direct mounting on the ball valve with only one central screw. The

assembly tool is integrated in the plug-in position indication. The mounting orientation

in relation to the ball valve can be selected in 90° steps.

Manual override Manual override with push-button possible (the gear is disengaged for as long as the

button is pressed or remains locked).

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops

when the end stop is reached.

Adjustable angle of rotation Adjustable angle of rotation with mechanical end stops.

Accessories

Electrical	200250	ripo
Electrical	accesso	ries

Description	Туре
Auxiliary switch, add-on, 1 x SPDT	S1A
Auxiliary switch, add-on, 2 x SPDT	S2A
Feedback potentiometer 140 Ohm, add-on	P140A
Feedback potentiometer 200 Ohm, add-on	P200A
Feedback potentiometer 500 Ohm, add-on	P500A
Feedback potentiometer 1 kOhm, add-on	P1000A
Feedback potentiometer 2.8 kOhm, add-on	P2800A
Feedback potentiometer 5 kOhm, add-on	P5000A
Feedback potentiometer 10 kOhm, add-on	P10000A



Electrical installation




Notes

- · Connection via safety isolating transformer.
- Parallel connection of other actuators possible. Observe the performance data.
- Direction of rotation switch is covered. Factory setting: Direction of rotation Y2.

Wiring diagrams

AC/DC 24 V, open-close

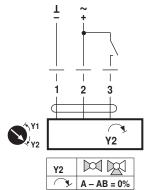



Cable colours:

1 = black

2 = red

3 = white



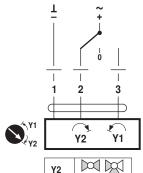

 Cable colours:


1 = black

2 = red

3 = white

Dimensions [mm]

Dimensional drawings

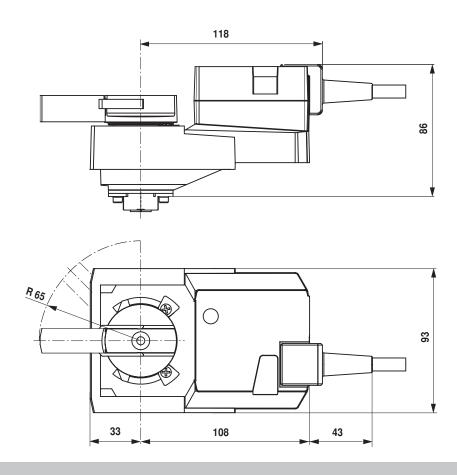

Further documentation

- Overview Valve-actuator combinations
- Data sheets for ball valves
- Installation instructions for actuators and/or ball valves
- General notes for project planning