

Room Operating Unit CO<sub>2</sub> / Humidity / Temperature with virtual display

For measuring temperature, humidity and  $CO_2$  in the room and for regulating the room temperature and/or ventilation. Thanks to MP-Bus communication and integrated analogue outputs, the room operating units can be seamlessly connected to existing third-party controllers. Commissioning and parametrising of the device are conveniently done with the Belimo Assistant App. The end user can access the device via the Belimo Display App to read room values and to adjust the temperature setpoint.

## **Technical data sheet**











## **Type Overview**

Туре	Communication	Voltage output	Measured values	Setpoint	Display type
P-22RTM-1900A-1	MP-Bus	3 x 05 V, 010 V, 210 V	CO <sub>2</sub> , Temperature, Relative humidity, Dew point	Temperature	Belimo Display App and LED
P-22RTH-1900A-1	MP-Bus	3 x 05 V, 010 V, 210 V	Temperature, Relative humidity, Dew point	Temperature	Belimo Display App

### **Technical data**

		:1	data	
-	ortr	ıraı	пата	

Nominal voltage	AC/DC 24 V
Nominal voltage range	AC 19.228.8 V / DC 19.228.8 V
Power consumption AC	1 VA
Power consumption DC	0.5 W
Electrical connection	Spring loaded terminal 0.251.5 mm <sup>2</sup>
Cable entry	Back side
	Top side
	Bottom side
Communication	MP-Bus

# Data bus communication

**Functional data** 

Communication	MP-Bus
Number of nodes	MP-Bus max. 8 (16)
Sensor Technology	CO₂: NDIR (non dispersive infrared) dual channel
Application	Air
Voltage output	3 x 05 V, 010 V, 210 V
Output signal active note	Output 05 V, 010 V (factory setting), 210 V selectable via NFC min. resistance 5 k $\Omega$
Display	Belimo Display App and LED The LED is used for the CO <sub>2</sub> TLF (traffic light function). The LED can be parametrised and



Measu

## Technical data sheet

asuring data	Measured values	${ m CO_2}$ Relative humidity Dew point Temperature
	Measuring range CO₂	Default setting: 02000 ppm
	Measuring range humidity	Default setting: 02000 ppm
	Measuring range temperature	Default setting: 050°C [-32122°F]
	Measuring range dew point	Default setting: -5050°C [-60120°F]
	Accuracy CO <sub>2</sub>	±(50 ppm + 2% of measured value)
	Accuracy humidity	±2% between 090% RH @ 25°C
	Accuracy temperature active	±0.5°C @ 25°C [±0.9°F @ 77°F]
	Long-term stability	±20 ppm p.a. ±0.25% RH p.a. @ 25°C @ 50% RH ±0.03°C p.a. @ 25°C [±0.05°F p.a. @ 77°F]
Materials	Housing	PC, white, RAL 9003
Safety data	Protection class IEC/EN	III, Protective Extra-Low Voltage (PELV)
	Degree of protection IEC/EN	IP30
	EU Conformity	CE Marking
	Quality Standard	ISO 9001
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	050°C [32122°F]

#### Safety notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorised modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

#### Remarks

General remarks concerning sensors

The measuring result is influenced by the thermal characteristics of the wall. A solid concrete wall responds to thermal fluctuations within a room more slowly than a light-weight structure wall. A room sensor always detects a mixture of air and wall temperature. This means that the radiant heat of the wall, which is important for comfort, is also included in the measurement result.

Build-up of self-heating by electrical dissipative power

Temperature sensors with electronic components always have a dissipative power which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. The dissipative power should be taken into account when measuring temperature.

Belimo room sensors have adaptive temperature compensation for the entire supply voltage range. This ensures that the ambient temperature is detected with the highest accuracy at all times.

#### Application notice for humidity sensors

Refrain from touching the sensitive humidity sensor element. Touching the sensitive surface will void warranty.


When exposed to harsh environmental conditions such as high ambient temperature and/or high levels of humidity, or presence of aggressive gases (i.e. chlorine, ozone, ammonia), the sensor element may be affected and readings may be outside the specified accuracy. Replacement of deteriorated humidity sensors due to harsh environmental conditions is not covered by the general warranty.

The sensor shows best performance when operated within recommended normal temperature range of 5...60°C and humidity range of 20...80% RH. Long-term exposure to conditions outside normal range, especially at high humidity, may temporarily offset the humidity signal (e.g. +3% RH after 60h kept at >80% RH). After returning into the normal temperature and humidity range, the sensor will slowly come back to calibration state by itself.

#### Information self-calibration feature CO<sub>2</sub>

All CO<sub>2</sub> sensors are subject to drift caused by the aging process of the components, resulting in regular re-calibration or replacement of units. However, the dual channel technology integrates automatic self-calibration technology vs. common used ABC-Logic sensors. Dual channel selfcalibration technology is ideally suited for applications operating 24/7 hours such as those in hosiptals or other commerical applications. Manual calibration is not required.

# **Indicators and Operation**

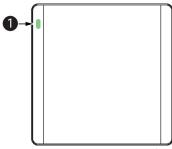



## CO<sub>2</sub> TLF (traffic light function), available on the (P-)22RTM-.. sensor

Colours: green, yellow and red. LED can be parametrised and deactivated via Belimo Assistant App.

Operation

With the Belimo Display App, actual values of the room unit can be displayed and setpoints can be adjusted. This means that no display on the room unit is required. Thanks to communication via NFC (near field communication), third parties cannot access safety critical data.

#### How it works:

- 1. Download the Belimo Display App
- 2. Hold the smartphone to the room unit
- 3. View/adjust actual values or setpoints
- 4. To activate the setpoints, hold the smartphone to the room unit again



## Scope of delivery

Screws



### **Accessories**

Tools	Description	Туре
	Belimo Display App	Belimo Display
		Арр
	Belimo Assistant App, Smartphone app for easy commissioning,	Belimo Assistant
	parametrising and maintenance	Арр
	Converter Bluetooth / NFC	ZIP-BT-NFC

### Service

#### **NFC** connection


Belimo equipment marked with the NFC logo can be operated and parameterized with the Belimo Assistant App.

### Requirement:

- NFC- or Bluetooth-capable smartphone
- Belimo Assistant App (Google Play & Apple AppStore)

Align NFC-capable smartphone on the sensor so that both NFC antennas are superposed.

Connect Bluetooth-enabled smartphone via the Bluetooth-to-NFC Converter ZIP-BT-NFC to the sensor. Technical data and operation instructions are shown in the ZIP-BT-NFC data sheet.

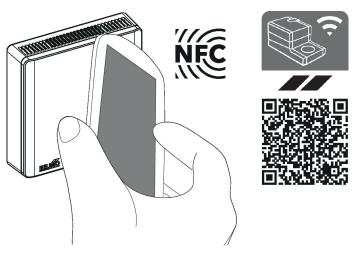

# Wiring diagram

**Notes** Analogue outputs: The analogue outputs AO1, AO2 and AO3 can be parametrised via NFC.




Factory settings: AO1: Temperature

AO2: Setpoint Temperature


AO3: 22RTH: Humidity, 22RTM: CO<sub>2</sub>



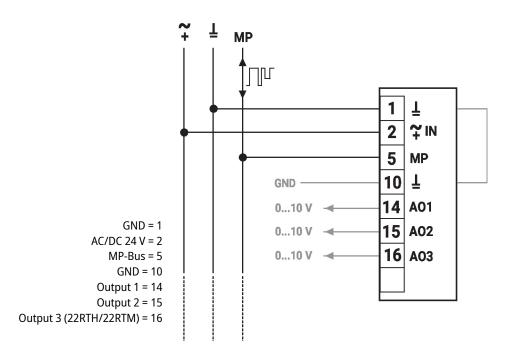



# Dimensions

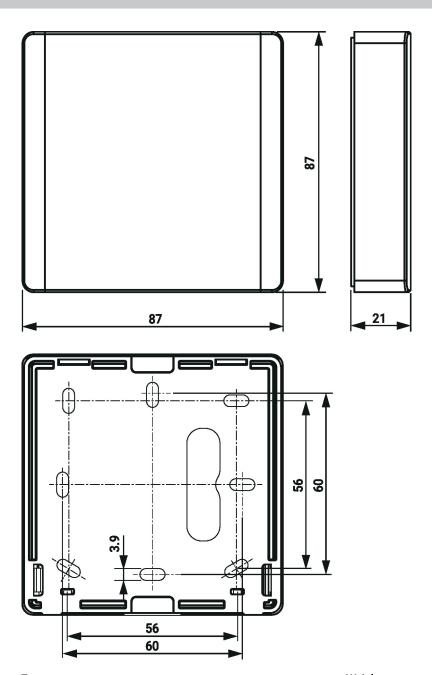

Туре	Weight
P-22RTM-1900A-1	0.124 kg
P-22RTH-1900A-1	0.113 kg