

Configurable globe valve actuator for 2-way and 3-way globe valves
• Actuating force 2500 N

- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V variable
- · Stroke 40 mm



| echnical data | | |
|-----------------|------------------------------------|---|
| Electrical data | Nominal voltage | AC/DC 24 V |
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 19.228.8 V / DC 21.628.8 V |
| | Power consumption in operation | 11 W |
| | Power consumption in rest position | 1.5 W |
| | Power consumption for wire sizing | 18 VA |
| | Connection supply / control | Cable 1 m, 4 x 0.75 mm ² |
| | Parallel operation | Yes (note the performance data) |
| Functional data | Actuating force motor | 2500 N |
| | Operating range Y | 210 V |
| | Input Impedance | 100 kΩ |
| | Options positioning signal | Open/close |
| | | 3-point (AC only) |
| | | Modulating (DC 032 V) |
| | Operating range Y variable | Start point 0.530 V |
| | | End point 2.532 V |
| | Position feedback U | 210 V |
| | Position feedback U note | Max. 0.5 mA |
| | Position feedback U variable | Start point 0.58 V |
| | | End point 2.510 V |
| | Position accuracy | ±5% |
| | Manual override | with push-button, can be locked |
| | Stroke | 40 mm |
| | Running time motor | 35 s / 40 mm |
| | Running time motor variable | 3590 s |
| | Adaptation setting range | manual (automatic on first power-up) |
| | Adaptation setting range variable | No action |
| | | Adaptation when switched on |
| | | Adaptation after pushing the gear |
| | | disengagement button |
| | Override control | MAX (maximum position) = 100% |
| | | MIN (minimum position) = 0% |
| | Override control variable | ZS (intermediate position, AC only) = 50% MAX = (MIN + 33%)100% |
| | Override control variable | MIN = 0%(MAX - 33%) |
| | | ZS = MINMAX |
| | Sound power level, motor | 65 dB(A) |
| | Position indication | Mechanically, 540 mm stroke |
| Safety | Protection class IEC/EN | III Safety Extra-Low Voltage (SELV) |
| Salety | Protection class ILC/EN | UL Class 2 Supply |
| | Degree of protection IEC/EN | IP54 |
| | | NEMA 2 |
| | Degree of protection NEMA/UL | UL Enclosure Type 2 |
| | Enclosure | |
| | EMC Contition IFC/FN | CE according to 2014/30/EU |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-14 |
| | Certification UL | cULus according to UL60730-1A, UL60730-14 and CAN/CSA E60730-1:02 |

Globe valve actuator, parametrisable, modulating, AC/ DC 24 V, 2500 N, Running time motor 35 s



Technical data Safety Certification UL note The UL marking on the actuator depends on the production site, the device is UL-compliant in any case Mode of operation Type 1 Rated impulse voltage supply / control 0.8 kV Control pollution degree 0...50°C Ambient temperature -40...80°C Storage temperature Ambient humidity Max. 95% r.H., non-condensing Servicing maintenance-free Weight

Safety notes



Weight

This device has been designed for use in stationary heating, ventilation and airconditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

3.7 kg

- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the actuator and that is ensured that the ambient conditions remain at any time within the thresholds according to the data sheet.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- · The switch for changing the direction of motion and so the closing point may be adjusted only by authorised specialists. The direction of motion is critical, particularly in connection with frost protection circuits.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

| Mode | of or | peration |
|------|-------|----------|
|------|-------|----------|

The actuator is connected with a standard modulating signal of 0...10 V and drives to the position defined by the positioning signal. The measuring voltage U serves for the electrical display of the actuator position 0.5...100% and as slave control signal for other actuators.

Parametrisable actuators

The factory settings cover the most common applications. Single parameters can be modified with the Belimo Service Tools MFT-P or ZTH EU.

Simple direct mounting

Simple direct mounting on the globe valve by means of form-fit hollow clamping jaws. The actuator can be rotated by 360° on the valve neck.

Manual override

Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked).

The stroke can be adjusted by using a hexagon socket screw key (5 mm), which is inserted into the top of the actuator. The stroke shaft extends when the key is rotated clockwise.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Combination valve/actuator

Refer to the valve documentation for suitable valves, their permitted fluid temperatures and closing pressures.

Position indication

The stroke is indicated mechanically on the bracket with tabs. The stroke range adjusts itself automatically during operation.

Globe valve actuator, parametrisable, modulating, AC/ DC 24 V, 2500 N, Running time motor 35 s



MFT-C

Product features

Home position

Factory setting: Actuator spindle is retracted.

When valve-actuator combinations are shipped, the direction of motion is set in

accordance with the closing point of the valve.

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaption, which is when the operating range and position

feedback adjust themselves to the mechanical setting range.

The actuator then moves into the position defined by the positioning signal.

Setting direction of stroke

When actuated, the stroke direction switch changes the running direction in normal

Adaption and synchronisation

An adaption can be triggered manually by pressing the "Adaption" button or with the PC-Tool. Both mechanical end stops are detected during the adaption (entire setting

Automatic synchronisation after pressing the gearbox disengagement button is

configured. The synchronisation is in the home position (0%).

The actuator then moves into the position defined by the positioning signal.

A range of settings can be adapted using the PC-Tool (see MFT-P documentation)

Accessories

| | Description | Туре |
|------------------------|---|---------|
| Electrical accessories | Auxiliary switch 2 x SPDT add-on | S2A-H |
| | Connection cable 5 m, A: RJ11 $6/4$ ZTH EU, B: 6-pin service socket for Belimo device | ZK1-GEN |
| | Connection cable 5 m, A: RJ11 6/4 ZTH EU, B: free wire end for connection to MP/PP terminal | ZK2-GEN |
| | Description | Туре |
| Service Tools | Service Tool, with ZIP-USB function | ZTH EU |
| | Belimo PC-Tool, Software for adjustments and diagnostics | MFT-P |

Electrical installation



Notes


· Connection via safety isolating transformer.

Adapter for Service-Tool ZTH

- Parallel connection of other actuators possible. Observe the performance data.
- Direction of stroke switch factory setting: Actuator spindle retracted (A).

Wiring diagrams

AC/DC 24 V, modulating

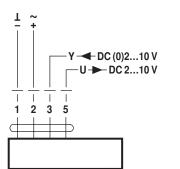

Cable colours:


- 1 = black
- 2 = red
- 3 = white
- 5 = orange




Functions

Functions with basic values (conventional mode)


Override control with AC 24 V with relay contacts

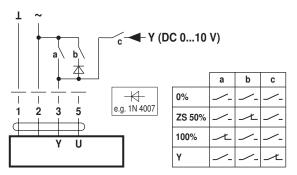



Override control with AC 24 V with rotary switch

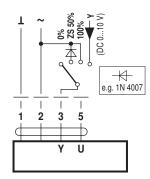


Control remotely 0...100% with Minimum limit with positioner SG.. positioner SG..

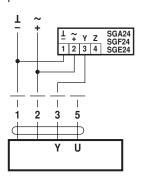

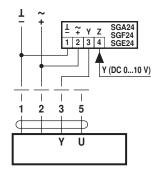


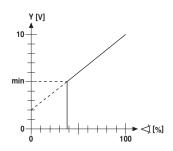

Follow-up control (position-dependent)

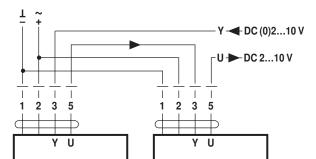


Control with 4...20 mA via external resistor

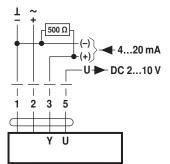

Caution:

The operating range must be set to DC 2...10 V. The 500 Ω resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V

Functional check

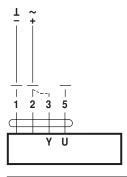

Procedure

- 1. Apply 24 V to connection 1 and 2
- 2. Disconnect connection 3:
- with upwards direction of motion: closing point at top
- with downwards direction of motion: closing point at bottom
- 3. Short circuit connections 2 and 3:
- Actuator runs in the opposite direction





Functions

Functions for devices with specific parameters (Parametrisation necessary)

Override control and limiting with AC 24 V with relay contacts

Override control and limiting with AC 24 V with rotary switch

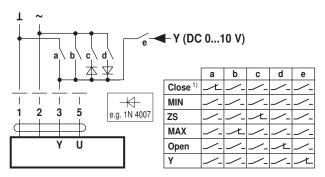


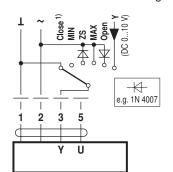

1) **Caution:** This function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.


Control open/close

1 ~ U

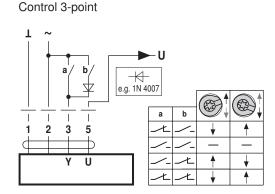



Operating controls and indicators

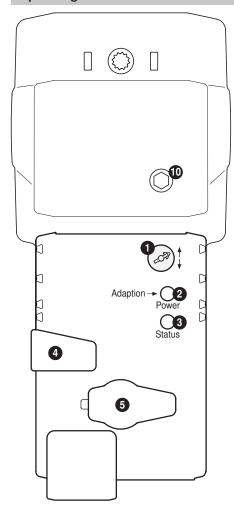

Direction of stroke switch

Switch over: Direction of stroke changes

Push-button and LED display green

Off: No power supply or malfuntion

On: In operation

Press button: Triggers stroke adaptation, followed by standard mode

3 Push-button and LED display yellow

Off: Standard mode

On: Adaptation process active

Press button: No function

4 Gear disengagement button

Press button: Gear disengages, motor stops, manual override possible

Release button: Gear engages, synchronisation starts, followed by standard mode

5 Service plug

For connecting parameterisation and service tools

10 Manual override


Clockwise: Actuator spindle extends Counterclockwise: Actuator spindle retracts

Service

Service Tools connection

The actuator can be parametrised by ZTH EU via the service socket. For an extended parametrisation the PC tool can be connected.


Connection ZTH EU / PC-Tool

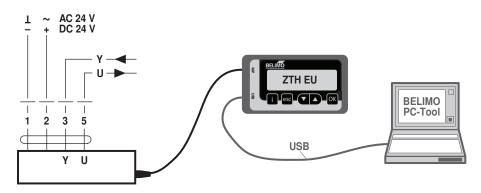



Dimensions [mm]

Dimensional drawings

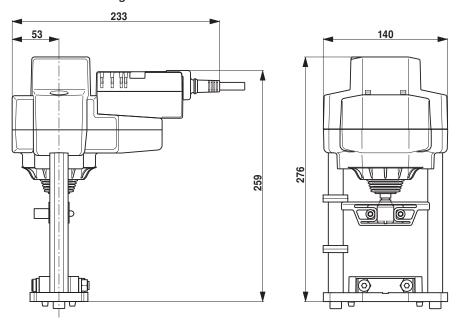

Further documentation

- The complete product range for water applications
- Data sheets for globe valves
- Installation instructions for actuators and/or globe valves Notes for project planning 2-way and 3-way globe valves
- · General notes for project planning